 


# MiniTouch

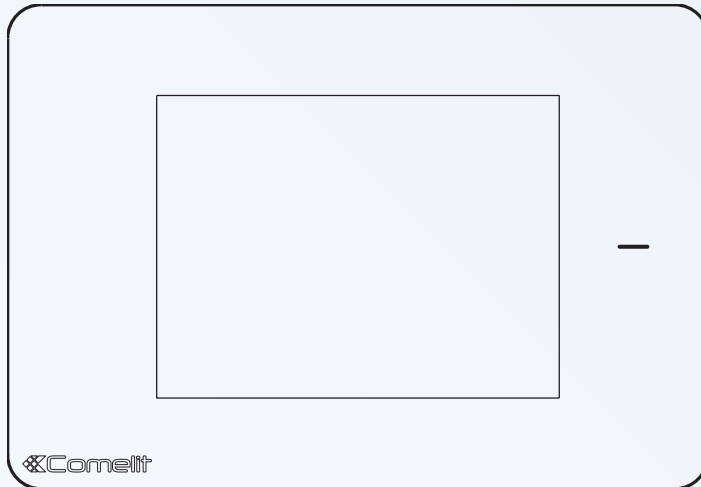

# INDEX

<b>INTRODUZIONE</b> .....	4	LAN - GATEWAY .....	33
WARNING .....	4	LAN - VIP ADDRESS .....	34
MONITOR DESCRIPTION .....	5	<b>FUNZIONI</b> .....	35
<b>MENÙ</b> .....	6	OTHER / BLINDS / .....	35
MINITOUCH MENU .....	6	LIGHTS / IRRIGATION / AUTOMATIONS .....	35
MENU "ALARM" ICON STATUS .....	6	TIMED FUNCTIONS .....	36
MENU ICON STATUS .....	7	<b>SCHEDULING</b> .....	37
BOOKMARKS AND FAVOURITES .....	7	DIMMER LIGHTS .....	39
BAR AND TIME AND CONSUMPTION TOOLBAR .....	7	DIMMER LIGHT SCHEDULING .....	39
ADDING BOOKMARKS .....	8	DIMMER / PRESENCE LIGHTS .....	40
REMOVING BOOKMARKS .....	8	DIMMER / PRESENCE LIGHT SCHEDULING .....	40
REMOVING FAVOURITES .....	8	RGB LIGHTS .....	41
<b>ALLARME</b> .....	9	RGB LIGHT SCHEDULING .....	41
ALARM MENU .....	9	<b>CLIMA</b> .....	42
ALARM STATUS .....	9	<b>CLIMATE</b> .....	42
RESET ALARMS .....	10	CLIMATE CONTROL .....	42
TIMED ACTIVATIONS .....	11	CLIMATE FORCING .....	43
ACTIVATING THE ANTI-INTRUSION SYSTEM .....	11	CLIMATE SCHEDULING .....	43
ANTI-INTRUSION SYSTEM DEACTIVATION (1) .....	14	<b>LOADS</b> .....	46
ANTI-INTRUSION SYSTEM DEACTIVATION (2) .....	15	LOADS .....	46
ALARM SETTINGS .....	16	<b>CONSUMPTION</b> .....	47
CAMERAS .....	16	CONSUMPTION .....	47
CUSTOMISED ACTIVATION .....	17	CONSUMPTION / PRODUCTION COMPARISON .....	47
ACTIVATION CONTROL .....	18	<b>SCENARIOS</b> .....	48
Event log .....	18	SCENARIOS .....	48
ZONE AND AREA STATUS .....	19	ACTIVATING A SCENARIO .....	49
QUICK COMMANDS .....	20	DEACTIVATING A SCENARIO .....	49
OUTPUT COMMAND .....	21	RENAMING A SCENARIO .....	49
PHONE BOOK .....	22	<b>SETUP</b> .....	50
<b>ALARM OPTIONS</b> .....	23	SETUP MENU DESCRIPTION .....	50
OPTIONS - CHANGE PIN .....	24	<b>SETUP - GENERAL PARAMETERS</b> .....	50
OPTIONS - VOICE MENU .....	26	LANGUAGE .....	51
OPTIONS - INSTALLER .....	27	LOCKING THE KEYPAD AND TOUCH SCREEN .....	51
OPTIONS - TIMER .....	28	SETTING THE DATE AND TIME .....	52
OPTIONS - SET UP DESKTOP .....	29	ABOUT .....	52
BUZZER OPTIONS .....	30	<b>SETUP - CONDITIONS</b> .....	53
OPTIONS - CONFIGURATION .....	31	<b>SETUP - CONSUMPTIONS</b> .....	53
RS485 BUS ADDRESS .....	32	TOOLBAR .....	54
BUS RS485 SPEED .....	32	CURRENCY .....	54
DEVICE PASSWORD .....	32	K CO2 .....	55
USER CODE .....	32	DISPLAY .....	56
LAN .....	33	DISPLAY - RENAME METER .....	56
LAN - IP ADDRESS .....	33	RATES .....	57
LAN - SUBNET MASK .....	33	THRESHOLDS .....	59

RESET (METERS) .....	59	HOME AUTOMATION LIMITS .....	81
CONSUMPTIONS - SETTINGS .....	60	<b>SETUP - ADVANCED</b> .....	<b>82</b>
CONSUMPTIONS - SETT. - UNIT OF MEASUREMENT .....	60	CALIBRATING THE TOUCH SCREEN .....	82
CONSUMPTIONS - SETT. - PULSES .....	60	TOTAL RESET .....	83
CONSUMPTIONS - SETT. - INCREMENT .....	61	RESET CONFIGURATIONS .....	83
CONSUMPTIONS - SETT. - SCALE FACTOR .....	61	UPDATE CONFIGURATIONS .....	83
<b>SETUP - BACKLIGHT</b> .....	<b>61</b>	IMPORT / EXPORT .....	84
COURTESY MODE .....	62	UPDATE PRODUCT .....	86
ALARM MODE .....	62	DISABLE ALARM .....	87
CLIMATE MODE .....	62	ENABLE ALARM .....	87
<b>SETUP - BUZZER</b> .....	<b>63</b>		
<b>SETUP - ANTI-INTRUSION</b> .....	<b>63</b>		
<b>SETUP - SCENARIOS</b> .....	<b>64</b>		
<b>SETUP - INSTANT SCENARIOS</b> .....	<b>64</b>		
ACTIVATING SCENARIOS .....	64		
CREATING A NEW SCENARIO .....	65		
SCENARIO DELAY .....	67		
DELETING A SCENARIO .....	68		
RENAMING A SCENARIO .....	68		
CHANGING A SCENARIO .....	69		
CLIMATE SCENARIO .....	70		
<b>SETUP - SCHEDULED SCENARIOS</b> .....	<b>71</b>		
CREATING A NEW SCHEDULED SCENARIO .....	71		
DELETING A SCHEDULED SCENARIO .....	72		
RENAMING A SCHEDULED SCENARIO .....	72		
CHANGING A SCHEDULED SCENARIO .....	72		
<b>SETUP - CONDITIONED SCENARIOS</b> .....	<b>72</b>		
CREATING A NEW CONDITIONED SCENARIO .....	73		
HOME AUTOMATION CONDITIONS .....	73		
ALARM CONDITIONS .....	74		
DELETING A CONDITIONED .....	74		
SCENARIO .....	74		
RENAMING A SCHEDULED SCENARIO .....	74		
CHANGING A SCHEDULED SCENARIO .....	74		
<b>SETUP - KEY</b> .....	<b>75</b>		
REGISTERING NEW KEYS .....	75		
REGISTERING A KEY ON THE CONTROL PANEL .....	76		
DELETING A KEY .....	77		
RENAMING A KEY .....	77		
ASSOCIATING A SCENARIO WITH A KEY .....	78		
ACTIVATING SCENARIOS USING A KEY .....	79		
<b>SETUP - PROTECTION</b> .....	<b>79</b>		
USER PASSWORD .....	79		
ADVANCED PASSWORD .....	80		

## WARNING

- **Comelit Group S.p.A.** declines any responsibility for improper use of the apparatus, for any alterations made by others for any reason, and for the use of non-original accessories or materials.
- **Caution!** In order to reduce the risk of faults and electric shocks:
- Do not open the apparatus or carry out any repairs yourself. If necessary, request the services of qualified personnel.
- Do not insert objects or pour liquids into the device.
- Clean using a damp cloth. Do not use alcohol or other aggressive products.

Fonts are (c) Bitstream (see below). DejaVu changes are in public domain.  
Glyphs imported from Arev fonts are (c) Tavmjong Bah (see below)

### Bitstream Vera Fonts Copyright

Copyright (c) 2003 by Bitstream, Inc. All Rights Reserved. Bitstream Vera is a trademark of Bitstream, Inc.

Permission is hereby granted, free of charge, to any person obtaining a copy of the fonts accompanying this license ("Fonts") and associated documentation files (the "Font Software"), to reproduce and distribute the Font Software, including without limitation the rights to use, copy, merge, publish, distribute, and/or sell copies of the Font Software, and to permit persons to whom the Font Software is furnished to do so, subject to the following conditions:

The above copyright and trademark notices and this permission notice shall be included in all copies of one or more of the Font Software typefaces.

The Font Software may be modified, altered, or added to, and in particular the designs of glyphs or characters in the Fonts may be modified and additional glyphs or characters may be added to the Fonts, only if the fonts are renamed to names not containing either the words "Bitstream" or the word "Vera".

This License becomes null and void to the extent applicable to Fonts or Font Software that has been modified and is distributed under the "Bitstream Vera" names.

The Font Software may be sold as part of a larger software package but no copy of one or more of the Font Software typefaces may be sold by itself.

THE FONT SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF COPYRIGHT, PATENT, TRADEMARK, OR OTHER RIGHT. IN NO EVENT SHALL BITSTREAM OR THE GNOME FOUNDATION BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, INCLUDING ANY GENERAL, SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF THE USE OR INABILITY TO USE THE FONT SOFTWARE OR FROM OTHER DEALINGS IN THE FONT SOFTWARE.

Except as contained in this notice, the names of GNOME, the GNOME Foundation, and Bitstream Inc., shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Font Software without prior written authorization from the GNOME Foundation or Bitstream Inc., respectively. For further information, contact: fonts at gnome dot org.

### Arev Fonts Copyright

Copyright (c) 2006 by Tavmjong Bah. All Rights Reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of the fonts accompanying this license ("Fonts") and associated documentation files (the "Font Software"), to reproduce and distribute the modifications to the Bitstream Vera Font Software, including without limitation the rights to use, copy, merge, publish, distribute, and/or sell copies of the Font Software, and to permit persons to whom the Font Software is furnished to do so, subject to the following conditions:

The above copyright and trademark notices and this permission notice shall be included in all copies of one or more of the Font Software typefaces.

The Font Software may be modified, altered, or added to, and in particular the designs of glyphs or characters in the Fonts may be modified and additional glyphs or characters may be added to the Fonts, only if the fonts are renamed to names not containing either the words "Tavmjong Bah" or the word "Arev".

 
This License becomes null and void to the extent applicable to Fonts or Font Software that has been modified and is distributed under the "Tavmjong Bah Arev" names.

The Font Software may be sold as part of a larger software package but no copy of one or more of the Font Software typefaces may be sold by itself.

THE FONT SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF COPYRIGHT, PATENT, TRADEMARK, OR OTHER RIGHT. IN NO EVENT SHALL TAVMJONG BAH BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, INCLUDING ANY GENERAL, SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF THE USE OR INABILITY TO USE THE FONT SOFTWARE OR FROM OTHER DEALINGS IN THE FONT SOFTWARE.

Except as contained in this notice, the name of Tavmjong Bah shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Font Software without prior written authorization from Tavmjong Bah. For further information, contact: tavmjong @ free. fr.

## MONITOR DESCRIPTION


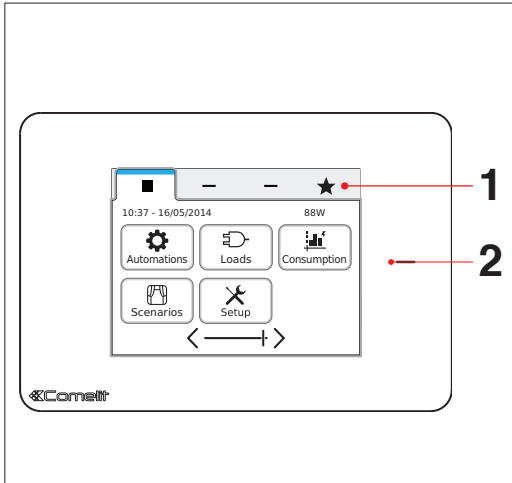




1. Touch screen
2. Key sensor

## MINITOUCH MENU

The Minitouch icons change depending on the type of system installed and the functions available. To navigate the menu, simply use your finger to touch the icon corresponding to the desired function.

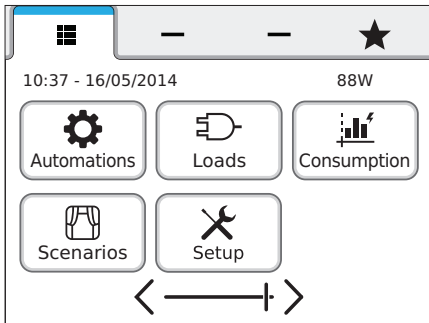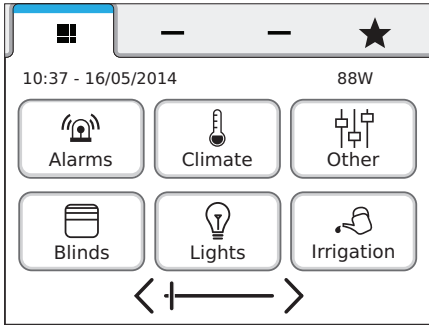  - ▶ Touch the display to access the main menu.



- ▶ Press the  icon to return to the main menu immediately.
- ▶ Press  to return to the previous screen.









- ▶ Press the  and  keys to navigate between menu screens.







 













## MENU "ALARM" ICON STATUS

The "alarm" icons on the home screen provide feedback on the alarm system status:

		
Alarm deactivated across the entire system	Alarm activated across the entire system	Alarm partially activated: only certain areas and/or partial zones are activated
		
Tampered/Faulty	Alarm memory	In alarm

## MENU ICON STATUS

The icons on the home screen provide feedback on the status of active elements within the corresponding section:

 
no elements active	some elements active	all elements active
 Climate	 Climate	 Climate
 Other	 Other	 Other
 Blinds	 Blinds	 Blinds
 Lights	 Lights	 Lights
 Irrigation	 Irrigation	 Irrigation
 Automations	 Automations	 Automations

- For blinds and shutters, the activation status corresponds to their movement status (opening/closing - raising/lowering).

## BOOKMARKS AND FAVOURITES BAR AND TIME AND CONSUMPTION TOOLBAR

The bookmarks and favourites bar is next to the icon.


The toolbar showing the time, date and system consumption data in real time is just underneath.

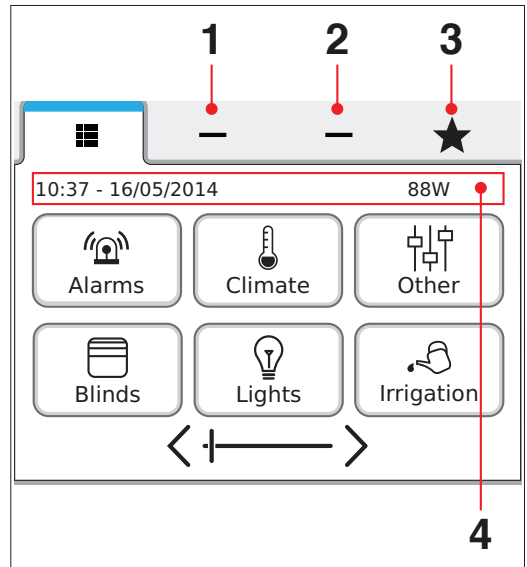




- Bookmark 1
- Bookmark 2
- Favourites menu
- Date and consumption menu

## ADDING BOOKMARKS

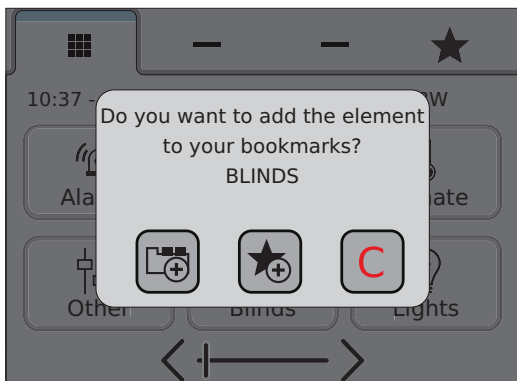 
- ▶ To add a function to the bar, press and hold the corresponding icon until the menu opens.





- Press  to add the function to the bookmarks panel.
- Press  to add the function to the favourites panel.
- Press  to cancel the procedure.
- ▶ To remove the function from the favourites menu, press the icon until the menu opens.

## REMOVING BOOKMARKS

  
- ▶ To remove a function from the bar, press and hold the corresponding icon on the bar until the menu opens.

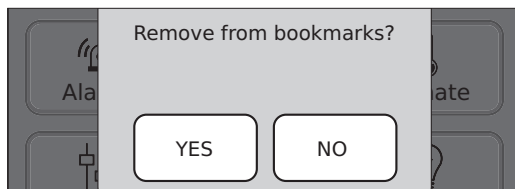



- ▶ Press  to remove the function from the bookmarks panel.
- ▶ Press  to cancel the removal procedure.

## REMOVING FAVOURITES

  
- ▶ To remove the function from the favourites menu, press the icon until the menu opens.

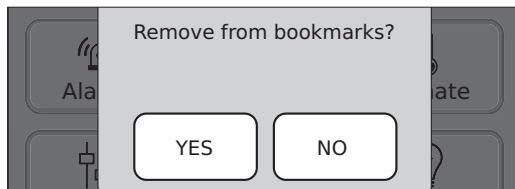


- ▶ Press  to remove the function from the bookmarks panel.
- ▶ Press  to cancel the removal procedure.





## ALARM MENU

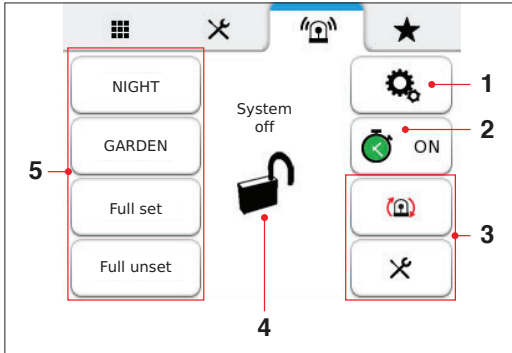 





► Press  to access the alarm menu.



1. Settings menu icon
2. Customisable icon (x1) - timed activations / view camera
3. Customisable icons (x2) - quick commands
4. System status
5. Customisable icons (x4) - activation control

- The menu can be customised via the settings: add or remove connections in "ACTIVATION CONTROL" on pag. 18 and "QUICK COMMANDS" on pag. 20.
- N.B. the alarm Home screen can also be configured via SafeManager.
- The connection (2) can be customised (see "OPTIONS - SET UP DESKTOP" on pag. 29) by selecting from the functions:

	
Timed activation function	View camera function


Alarm system status icon (5)		
 System off Alarm deactivated	 Insert total Alarm activated across the entire system	 Insert partial Alarm partially activated
 Alarm memory	 Alarm in progress	 In sabotaggio



• The flashing icon indicates one or more faults. Press the icon to view the details.


## ALARM STATUS

 ✓ An alarm is triggered.

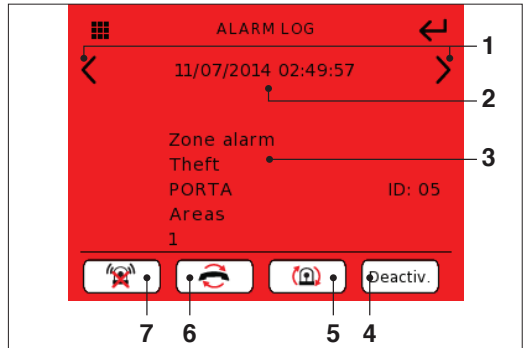


1. Scroll events icon
2. Selected event date and time
3. Event details
4. System deactivated icon
5. Reset alarms command icon
6. Reset phone calls command icon
7. Stop alarms command icon

 - If a camera on the alarm screen is associated with the zones, an additional icon (1) will appear to indicate that images were captured by the camera at the moment the alarm was activated.

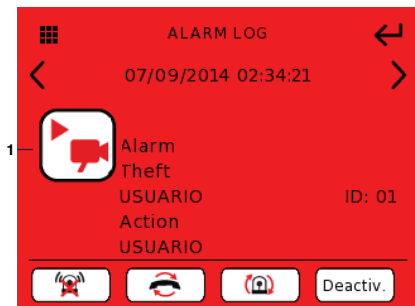

 - ▶ Premere l'icona  per aprire la schermata dettagli evento.

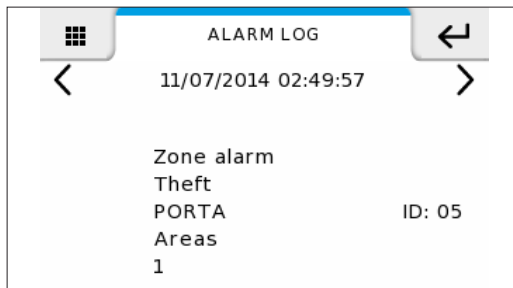




- ▶ Press the ALARM DEACTIVATION key to deactivate the alarm system.
- ▶ Press the RESET ALARMS icon to reset the alarm memory.
- ▶ Press the RESET PHONE CALLS icon to delete the memory dedicated to emergency telephone calls.
- ▶ Press the STOP ALARMS icon to stop the selected alarm (the system remains activated).

## RESET ALARMS

 
- ▶ A reset can be performed in one of 3 ways:

1. From the main alarm menu screen, press the RESET ALARMS icon\*.



	Indicates the presence of images relating to the zone.
	The system is searching for images corresponding to the zone.
	The system has not found any images corresponding to the zone.

The alarm menu also keeps track of the alarm which has arisen.

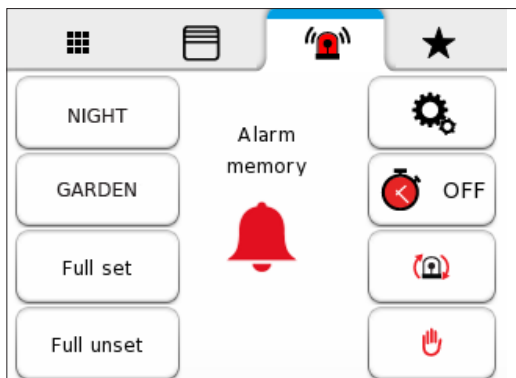



\*if previously added to the screen as described in paragraph "OUTPUT COMMAND" on pag. 21.

2. If you cannot see the icon, access the alarm menu and press the icon to access the alarm settings.



 - ▶ Access the QUICK COMMANDS function by pressing the corresponding icon.

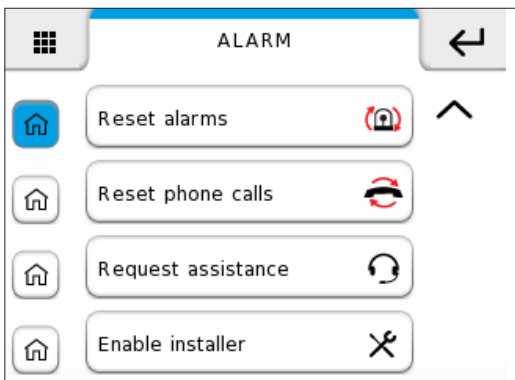



- ▶ Press the RESET ALARMS function icon  to reset the alarms.

3. Activate (even partially) the alarm system.



• The system does not provide any screen confirming correct execution of the function.


## TIMED ACTIVATIONS

 
- ▶ Access the alarm menu, then press the icon  / , enter the alarm password to activate / deactivate the timed control panel activations.




» A screen will confirm activation / deactivation of the function.

## ACTIVATING THE ANTI-INTRUSION SYSTEM


- ▶ Access the alarm menu and press the icon  to access the options menu.

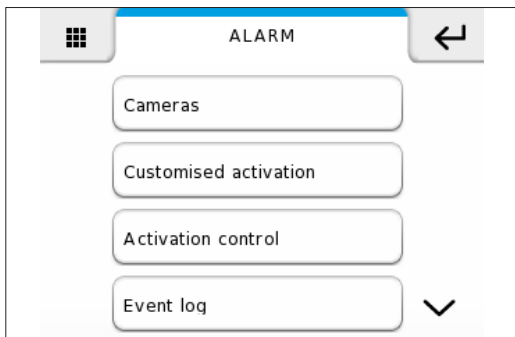

 
- ▶ Press the CUSTOMISED ACTIVATION ICON.

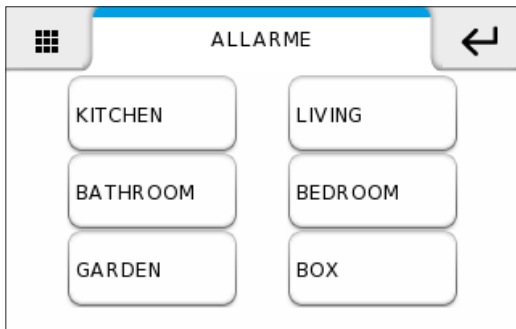

 
- ▶ Select the desired area by pressing the corresponding icon.

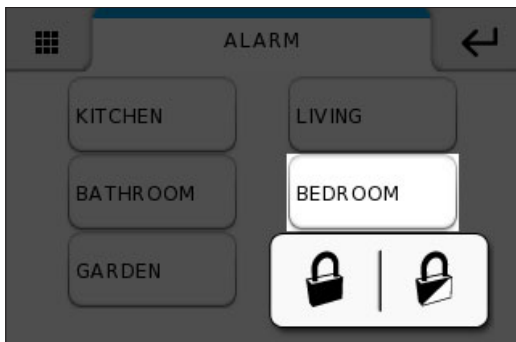


### FULL AREA ACTIVATION


- ▶ Press the  icon to activate the entire selected area.

 » An update screen opens:

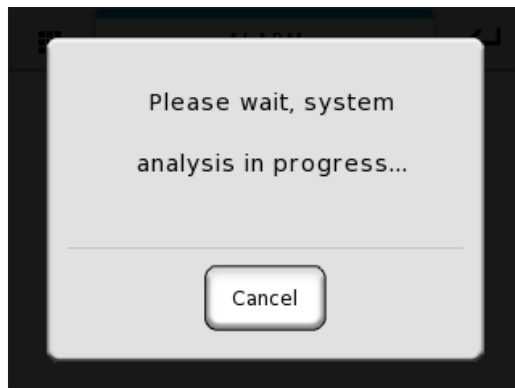

  » The system displays a confirmation screen.

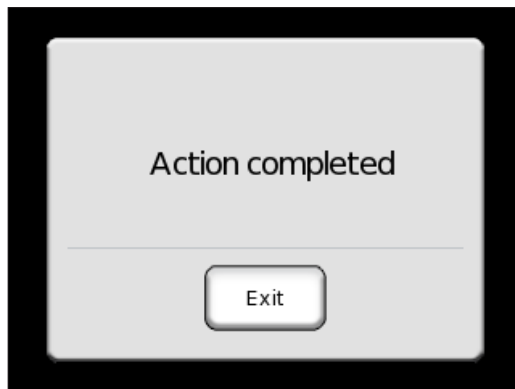


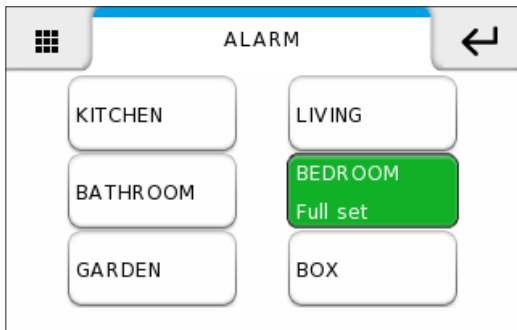

» The activated area will be highlighted in green; the type of activation carried out will also be indicated.

► Select the desired partial zone for partial activation and the activation type.

 
» An update screen opens:

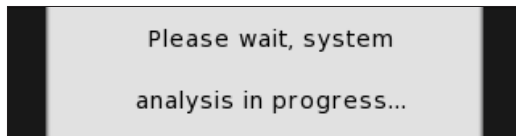


» The system displays a confirmation screen.




## PARTIAL AREA ACTIVATION

 
► Press the  icon to partially activate the selected area.

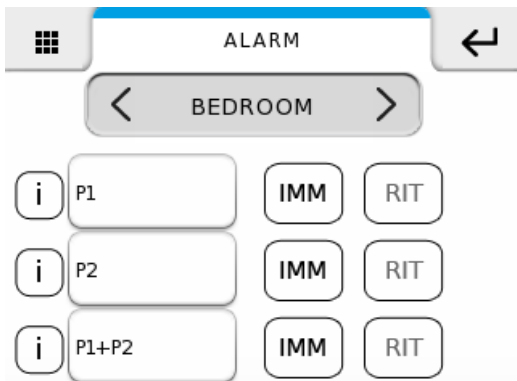


» The activated area will be highlighted in green; the type of activation carried out will also be indicated.

## ANTI-INTRUSION SYSTEM DEACTIVATION (1)

 - ▶ Access the alarm menu and press the icon  to access the alarm options menu.

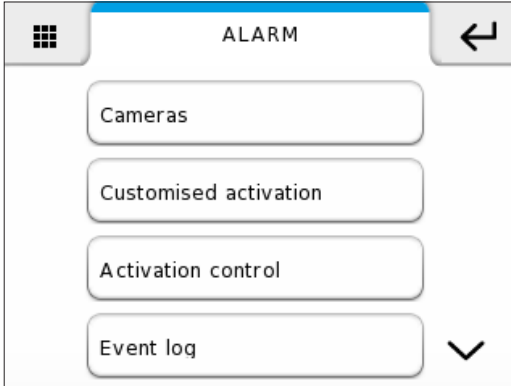

 
- ▶ Press the CUSTOMISED ACTIVATION ICON.

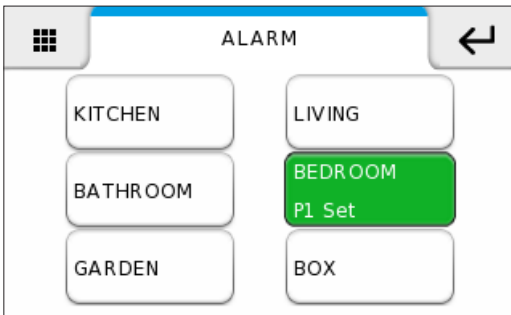


- ▶ Select the area you want to deactivate.



- ▶ Press the  icon to deactivate the system in the selected area.

 
» *An update screen opens:*

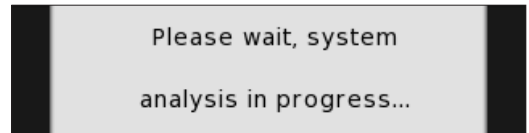


» *The system displays a confirmation screen.*




## ANTI-INTRUSION SYSTEM DEACTIVATION (2)

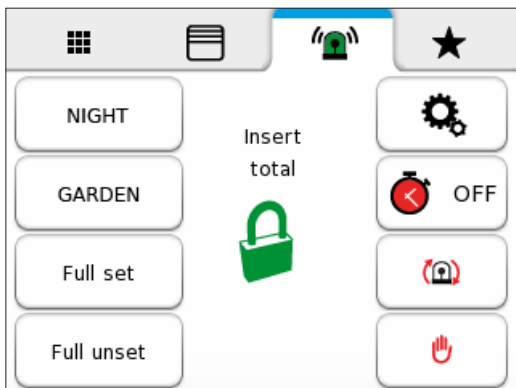 

 
- ▶ Press the padlock icon  /  to access the anti-intrusion system areas menu.

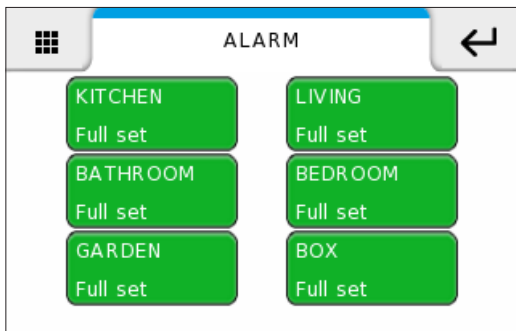

 - ▶ Select the area you want to deactivate.

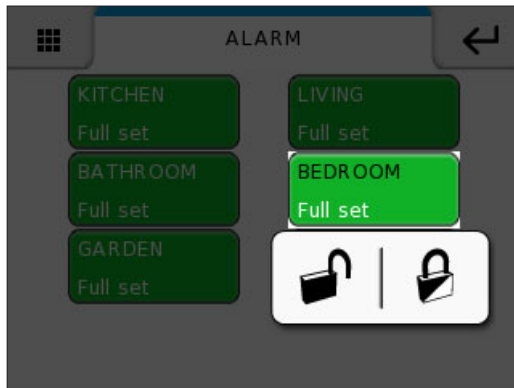


- ▶ Press the  icon to deactivate the system in the selected zone.

## ALARM SETTINGS

 - ▶ Access the alarm menu and press the icon



to access the alarm settings menu.

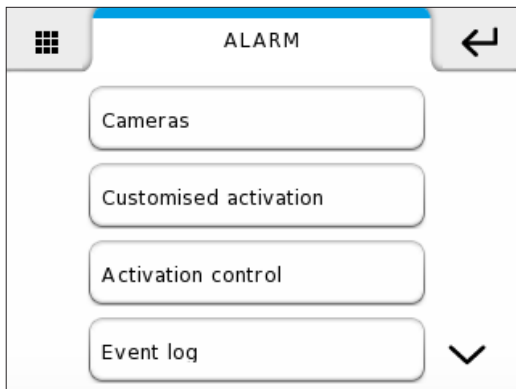

- ▶ Press the icon with the name of the desired function to open the corresponding panel.




- Every time a parameter relating to the ALARM function is changed, the data is set to the control panel. In this case a configuration update screen appears.


Configuration update  
in progress...

Please wait

## CAMERAS

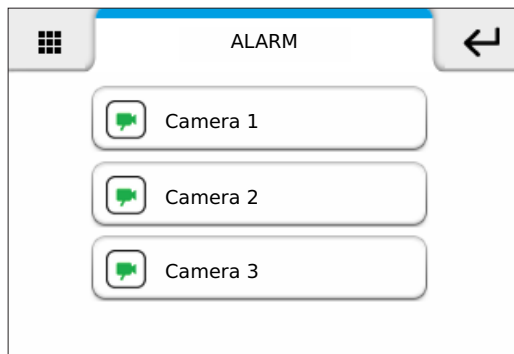 

 - ▶ Press the icon for the desired camera to start live playback.

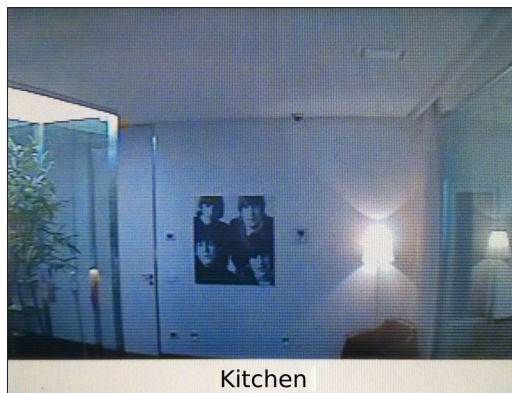




- ▶ Press the screen to reveal the toolbar



1. Live viewing
2. Change camera
3. Brightness control
4. Power off switch
5. Contrast control
6. Change camera

## CUSTOMISED ACTIVATION

 
The function can be used to view system areas and the status associated with each of them, and to activate / deactivate the system in the desired areas.

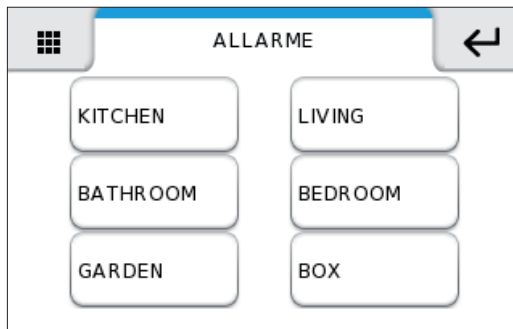

See "ACTIVATING THE ANTI-INTRUSION SYSTEM" on pag. 11 and "ANTI-INTRUSION SYSTEM DEACTIVATION (1)" on pag. 14


## ACTIVATION CONTROL

 The function can be used to run activation scenarios created previously.

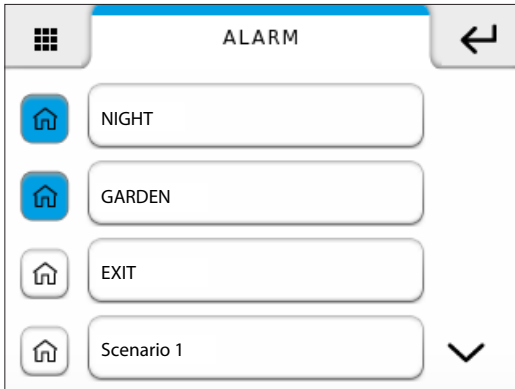



 - ▶ Press the icon with the relevant activation name to run the corresponding scenario.

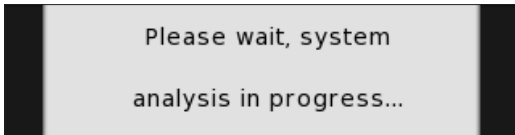
» *An update screen opens:*



» *The system displays a confirmation screen.*



Activation connections can be added to the main alarm screen (home  / alarm  ).

- ▶ Press the  icon to add the activation to the alarm function home screen.


» *The icon turns blue .*




- Up to 4 different activation controls can be entered on the main alarm screen!

## Event log

 The function can be used to view the log of events recorded by the system and alarms triggered.

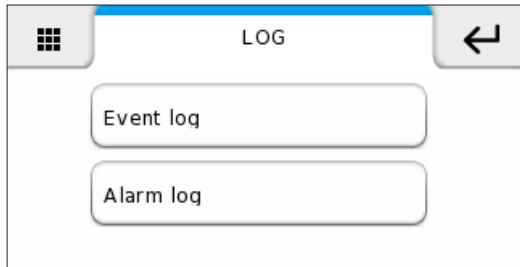

 
- ▶ Press the icon corresponding to the log you wish to consult.

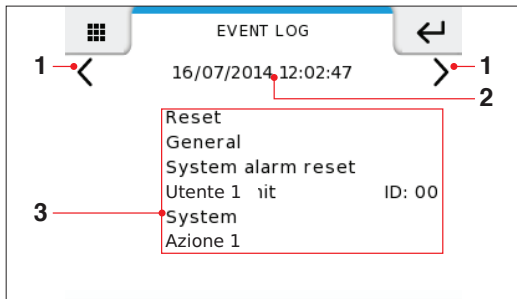

1. Events / alarms navigation icon
2. Selected event / alarm (date + time)
3. Event / alarm details


## ZONE AND AREA STATUS

 The function is used to check the status of the various zones / areas configured in the system.

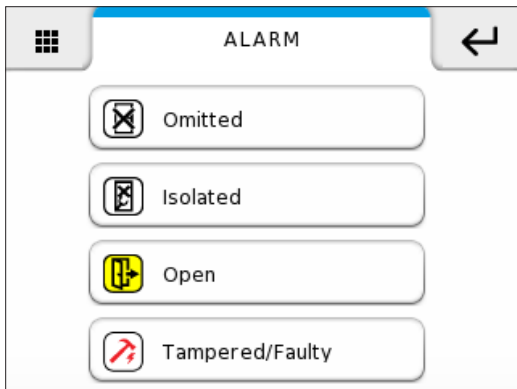


▶ Press the icon to open the list of any Omitted / Isolated / Open / Tampered - Faulty zones.

 ✓ If there are no zones corresponding to the condition.

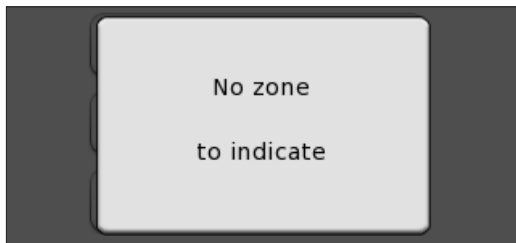

 
✓ If there are several zones corresponding to the criteria.

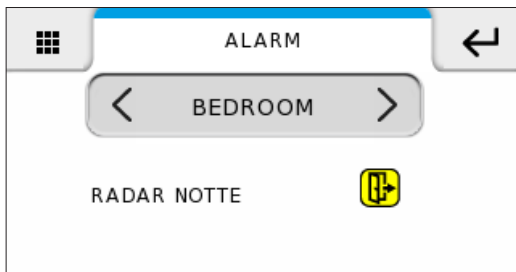



• You can scroll through the available areas using the < / > icons.


## QUICK COMMANDS

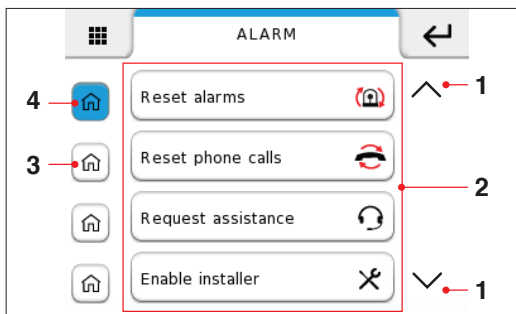 This function can be used to select which quick command buttons - max. 2 - (alarm commands) to move to the alarm home screen, or to execute a command (or alarm) from the list.



 
1. Menu navigation icons
  2. List of quick commands available
  3. Icon for connection on alarm home screen (deactivated)
  4. Icon for connection on alarm home screen (activated)
- ▶ Press the  icon to create a connection to the corresponding quick command on the home screen for the alarm function.
    - » *The icon corresponding to the selected command turns blue .*
  - ▶ Press the desired alarm icon to run it immediately.

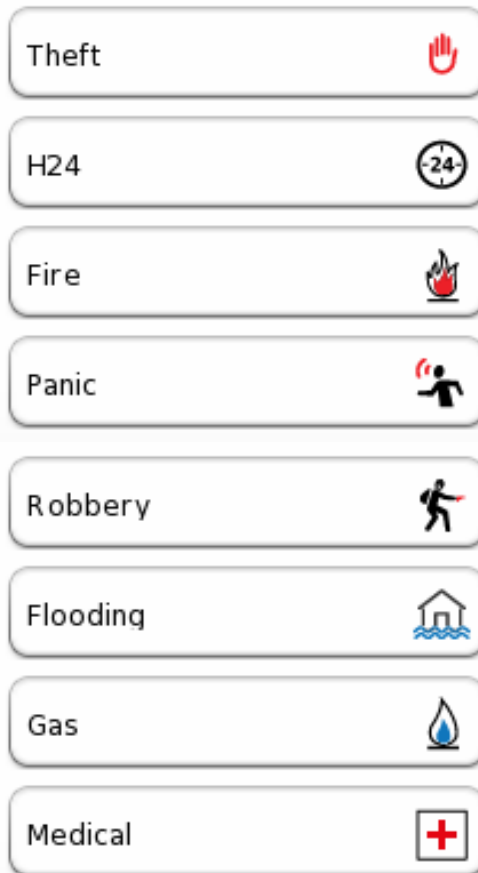

The following commands are available:



## OUTPUT COMMAND

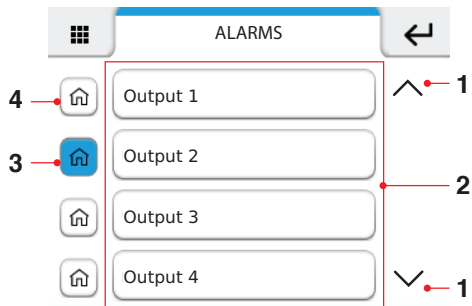 This function can be used to change the status of the system outputs.



1. Menu navigation icons
  2. List of output commands available
  3. Icon for connection on alarm home screen (activated)
  4. Icon for connection on alarm home screen (deactivated)
- Press the  icon to create a connection to the corresponding command function on the alarm home screen.
- » *The icon corresponding to the selected output turns blue .*

- ▶ Press the icon for the desired output to change its status.




- ▶ Select the desired status.
  - SET to activate the output
  - UNSET to deactivate the output
  - TOGGLE to change the status (if active it will be deactivated and vice-versa)

» *The system confirms completion.*

**Action completed**
 
## PHONE BOOK

This function can be used to edit the phone book memorised on the control panel.

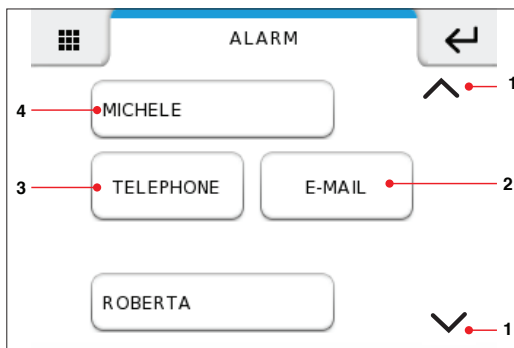

1. Scroll screen icons
2. Edit contact email
3. Edit contact telephone number
4. Edit contact name




- The control panel can memorise up to 16 contacts.

## ALARM

- ▶ Select the icon corresponding to the parameter to be edited.



- ▶ Make the desired changes, then confirm with the  icon.

» *The system confirms completion.*

**Action completed**

 
» *The system updates.*

Configuration update  
in progress...

Please wait

## ALARM OPTIONS


The options panel contains a series of sub-menus dedicated to the various alarm system settings.

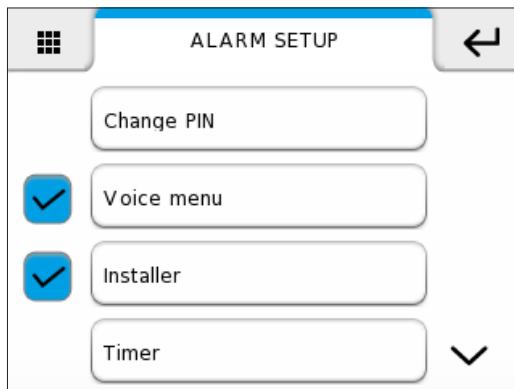

- ▶ Press the desired icon to open the corresponding panel.

## OPTIONS - CHANGE PIN

 The CHANGE PIN panel can be used to change or delete the pin codes associated with users.

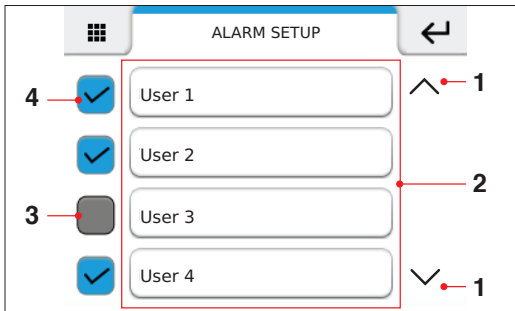

1. Menu navigation icons
2. List of available users
3. User PIN code not enabled
4. User PIN code enabled

### DELETING A USER PIN

- ▶ Press the  icon to DISABLE the PIN code for the corresponding user.

 


- ▶ Confirm the process.

» *The system confirms completion.*



» *The system updates.*

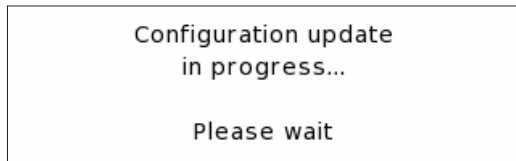


### ADDING A USER PIN

- ▶ Press the  icon to ENABLE the PIN code for the corresponding user.





- ▶ Enter the PIN code and confirm it by pressing the  icon on the dedicated screen.

» *The system confirms completion.*

Action completed

» *The system updates.*

Configuration update  
in progress...


Please wait

## CHANGING A USER PIN

- ▶ Press the icon corresponding to the desired user.



The screenshot shows the 'ALARM SETUP' screen. At the top left is a grid icon, and at the top right is a back arrow. The screen is divided into two sections: 'ENTER NEW PIN' and 'REPEAT NEW PIN'. Each section has a text label on the left and a corresponding empty input field. To the right of these fields is a numeric keypad with buttons for digits 1-9, 0, and a checkmark icon. The keypad is arranged in a 3x3 grid with 'C' (cancel) in the bottom-left corner.

- ▶ Enter the PIN code and confirm it by pressing the  icon on the dedicated screen.

» *The system confirms completion.*

Action completed

 
» *The system updates.*

Configuration update  
in progress...


Please wait

## OPTIONS - VOICE MENU

The option - if enabled - can be used to partially manage and monitor the control panel via telephone calls.

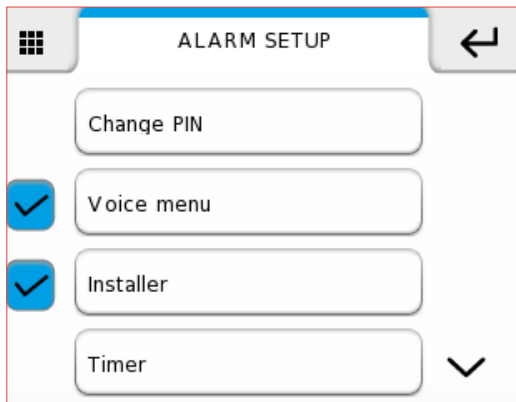

### ENABLING THE VOICE MENU

- ▶ Press the  icon corresponding to the VOICE MENU icon to ENABLE the function.


» *The system confirms completion.*

Action completed


» *The system updates.*

Configuration update  
in progress...

Please wait

» *The icon turns blue .*

### DISABLING THE VOICE MENU

- ▶ Press the  icon corresponding to the VOICE MENU icon to DISABLE the function.

» *The system confirms completion.*

Action completed

» *The system updates.*

 
Configuration update  
in progress...

Please wait


» *The icon turns grey .*

## OPTIONS - INSTALLER

The option enables / disables installer mode in control panel system parameters.

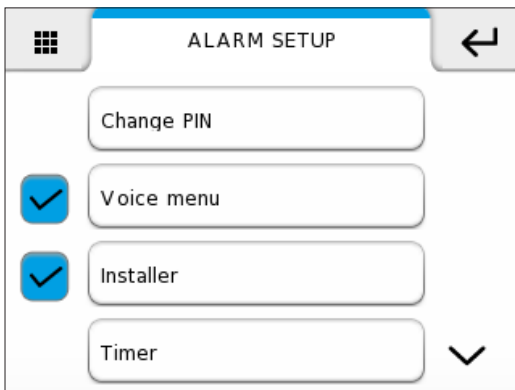

### ENABLING THE INSTALLER

- ▶ Press the  icon corresponding to the INSTALLER icon to ENABLE the function.


» *The system confirms completion.*

**Action completed**


» *The system updates.*

Configuration update  
in progress...

Please wait

» *The icon turns blue* .

### DISABLING THE INSTALLER

- ▶ Press the  icon corresponding to the INSTALLER icon to DISABLE the function.

» *The system confirms completion.*

**Action completed**

» *The system updates.*

 
Configuration update  
in progress...

Please wait

» *The icon turns grey* .

## OPTIONS - TIMER

The option can be used to enable / disable the alarm control panel activation timers.

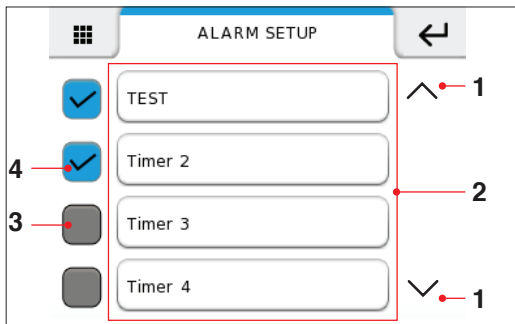

1. Menu navigation icons
2. List of available timers
3. Timer not active
4. Timer active

### ACTIVATING THE TIMER

- ▶ Press the  icon to ACTIVATE the corresponding timer.

» The system confirms completion.

Action completed


» The system updates.

Configuration update  
in progress...

Please wait

» The icon turns blue .

### DEACTIVATING THE TIMER

- ▶ Press the  icon to DEACTIVATE the corresponding timer.

» The system confirms completion.

Action completed

» The system updates.

 
Configuration update  
in progress...


Please wait


» The icon turns grey .

## OPTIONS - SET UP DESKTOP

The option can be used to delete connections to Activation controls / Quick commands / Output commands previously added to the alarm home screen.

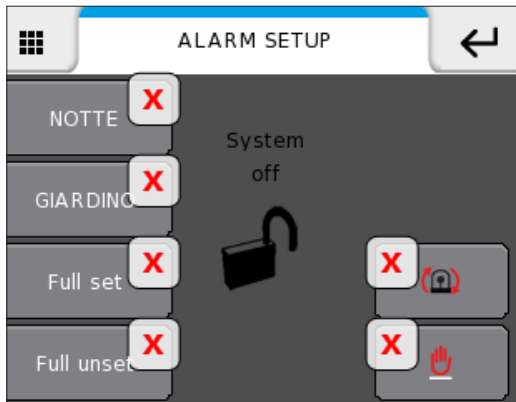

 - ▶ Press the  icon to delete the corresponding connection.

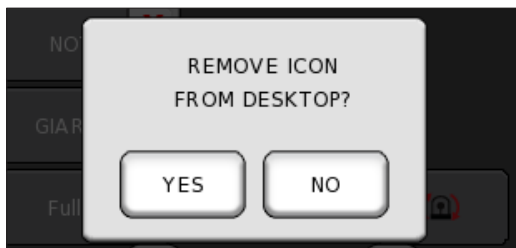




- ▶ Confirm the deletion.

 
» *The system confirms completion.*

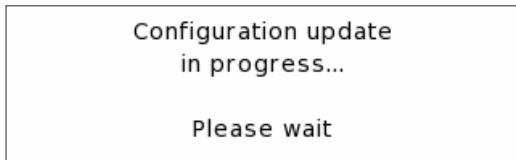

» *The system updates.*




 - ▶ Press the  /  icon to change the connection, selecting the desired function.

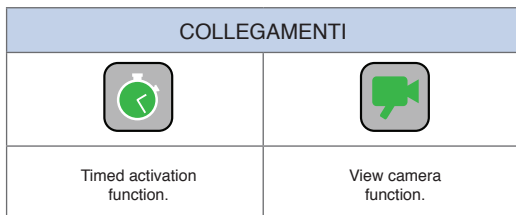

## BUZZER OPTIONS

 The function can be used to manage (by activating or deactivating) the control panel alert buzzers.

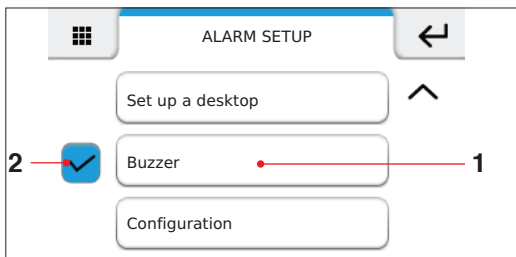


1. "Buzzer" sub-menu icon for activating individual tones
2. Activate/deactivate buzzer playback icon.

▶ If the function is selected or deselected using the  /  icons (2), playback of the buzzers selected in the "Buzzer" sub-menu (1) is enabled.

» *The system confirms completion.*



 
» *The system updates.*

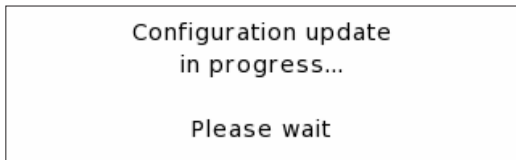

» *The icon changes status*  / .

▶ Press the "Buzzer" icon (1) to enter the sub-menu.

 The sub-menu can be used to select which audible signals you want to be replayed by the control panel and which you do not.

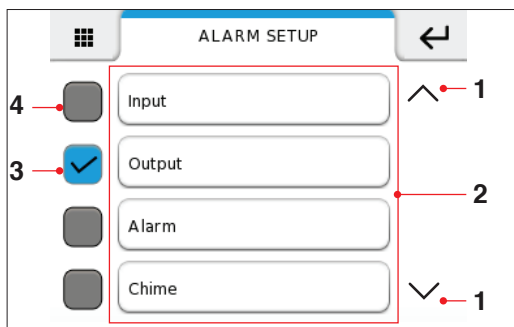


1. Menu navigation icons
2. List of audible signals available
3. Signalling enabled
4. Signalling disabled

▶ Select the audible signals by pressing the  icon.

» *The selected audible signal icons turn blue* .

## ACTIVATING THE BUZZER

- ▶ Press the  icon to ACTIVATE the corresponding audible signalling.

» *The system confirms completion.*

Action completed


» *The system updates.*

Configuration update  
in progress...

Please wait

» *The icon turns blue* .

## DEACTIVATING THE BUZZER

- ▶ Press the  icon to DEACTIVATE the corresponding audible signalling.

» *The system confirms completion.*

Action completed


» *The system updates.*

Configuration update  
in progress...

Please wait

» *The icon turns grey* .

## OPTIONS - CONFIGURATION



The screenshot shows a mobile application interface for 'ALARM SETUP'. At the top, there is a header bar with a grid icon on the left, the text 'ALARM SETUP' in the center, and a back arrow icon on the right. Below the header, there are four rounded rectangular buttons stacked vertically, each containing a configuration option: 'RS485 bus address', 'RS485 bus speed', 'Device password', and 'User code'.

- ▶ Select the entry you wish to change by pressing the corresponding icon.

## RS485 BUS ADDRESS

ALARM SETUP

2

1 2 3 4 5

6 7 8 9 0

C ✓

- ▶ Enter the desired value, then confirm by pressing the icon.

## BUS RS485 SPEED

ALARM SETUP

9600

38400

56700

115200

- ▶ Press the icon to select the desired value.

» The icon turns blue .



• Default Comelit BUS speed: 38400

## DEVICE PASSWORD

ALARM SETUP

\*\*\*\*\*

1 2 3 4 5

6 7 8 9 0

C ✓

- ▶ Enter the desired code, then confirm by pressing the icon.



• Default device code: 0 (zero)

## USER CODE

ALARM SETUP

\*\*\*\*\*

1 2 3 4 5

6 7 8 9 0

 
C ✓

- ▶ Enter the desired code, then confirm by pressing the icon.



## LAN

The menu can be used to select the LAN settings for the device.

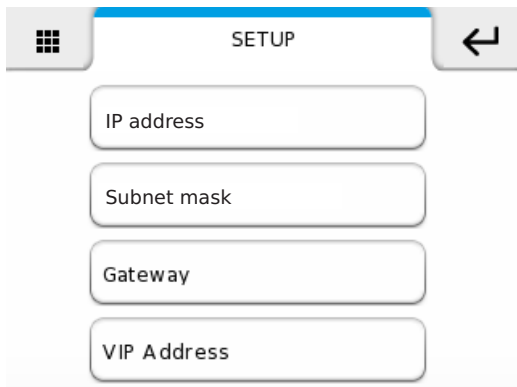




- ▶ Select the entry you wish to change by pressing the corresponding icon.

### LAN - IP ADDRESS

### LAN - SUBNET MASK

### LAN - GATEWAY




- ▶ Enter the desired values using the  /  icons to move between fields.
- ▶ Confirm by pressing the  icon.

## LAN - VIP ADDRESS

ALARM



The screenshot shows a digital keypad interface for setting an alarm code. At the top, the text "SETUP ALLARME" is displayed. Below it, a white box contains the entered code "00040002". The keypad consists of three rows of buttons: the first row has digits 1 through 5; the second row has digits 6 through 0; and the third row has a "C" (clear) button on the left and a green checkmark icon on the right. A back arrow icon is visible in the top right corner of the keypad area.

 
- ▶ Enter the desired code, then confirm by pressing the  icon.

## OTHER / BLINDS / LIGHTS / IRRIGATION / AUTOMATIONS

► Press




to access the relevant sections.

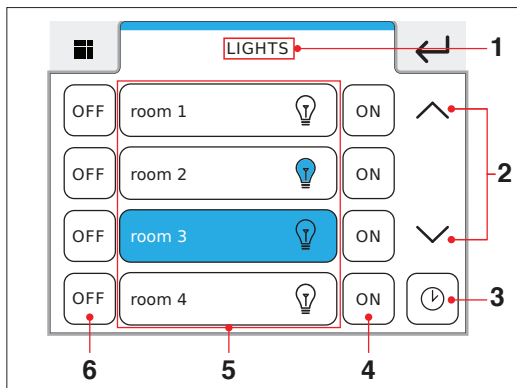

1. Panel description
2. Scroll screen icons
3. Scheduling icon
4. ON icon
5. Available rooms
6. OFF icon

 • LIGHTS section illustrative example

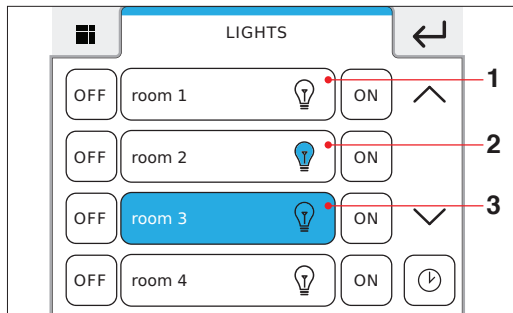


1. Room completely deactivated
2. Room partially activated
3. Room fully activated

► Press  /  to activate / deactivate rooms or individual elements.

• For blinds, the  /  buttons will be replaced by  / .

► Press  then select the desired room to access the room scheduling functions (see scheduling section).

 ► Press the room icon to view the menu of the individual elements it contains.

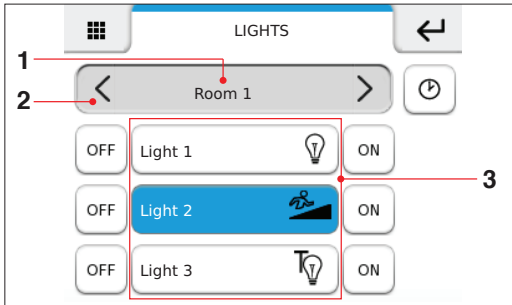

1. Selected room
2. Commands for scrolling between the available rooms
3. Details of the elements making up the room


- ▶ Press  /  to activate / deactivate individual elements.
- ▶ Press  then select the desired element to access the scheduling functions (see scheduling section).

## TIMED FUNCTIONS

 Some functions can be timed: an activation time can be set for the function.

timed functions	
<input type="button" value="T ⏸"/>	timed other
<input type="button" value="T ⚡"/>	timed light
<input type="button" value="T 🌿"/>	timed irrigation

- ▶ Press the relevant icon to open the timing menu.

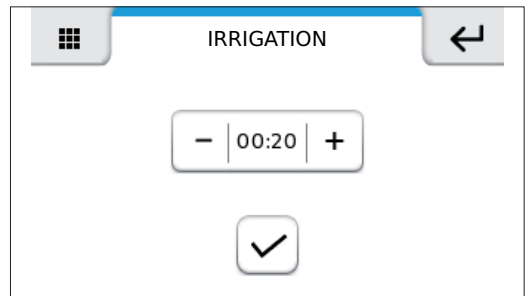


- ▶ Adjust the time using the   keys and confirm the procedure .


## SCHEDULING

 
- ▶ Press




to access the relevant sections.


- ▶ Press , then select the area you want to schedule.

» *The icon will turn blue before the desired area is selected .*

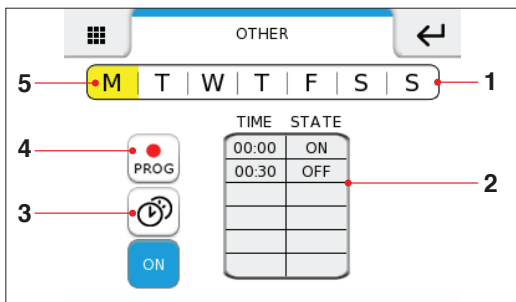



 
1. Days of week bar
2. Time / status table
3. Copy program icon
4. Programming icon
5. Selected day

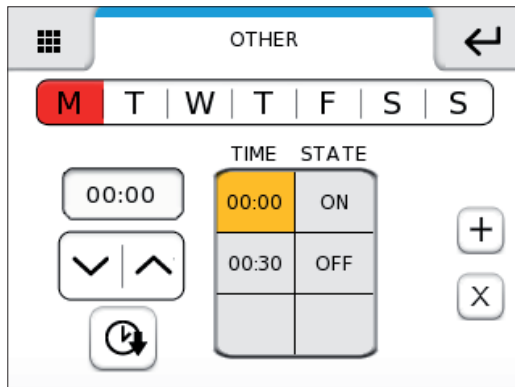- ▶ Select the desired day and press the  icon to enter the programming screen.




The previously selected day can be changed by pressing the bar above the corresponding icon.

 
» *The selected day or days are highlighted in red.*


- ▶ Press  to add a programming to the list.
- ▶ Set the time using the  $\nabla$ / $\wedge$  keys and press  to confirm.
- ▶ Set the desired status using the  $\nabla$ / $\wedge$  keys and press  to confirm.


» *The feature being changed will be highlighted in yellow.*

- ▶ Press **X** to delete a programming.
- ▶ When programming is complete, return to the previous screen .

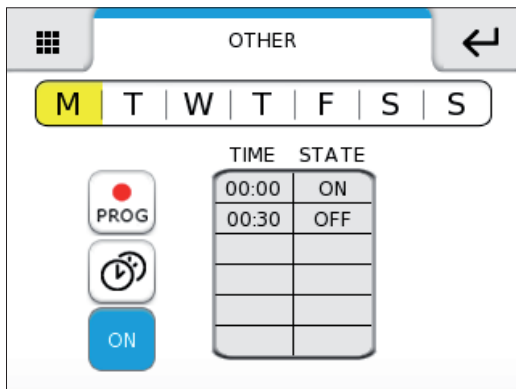

 
Once you have returned to the main screen you will be able to copy the activity programming for a specific day to others:

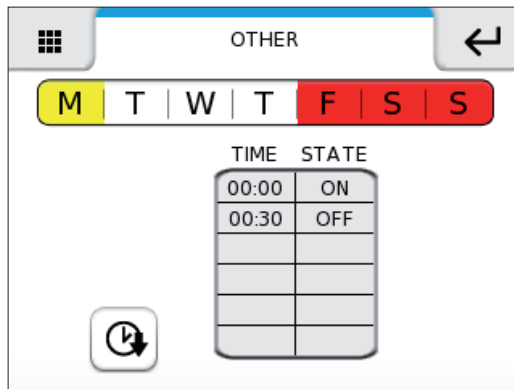

- ▶ Select the day of the week to copy from the band at the top.
  - » *The original day is highlighted in yellow.*
- ▶ Press the  icon and select the days of the week to which you want to apply the copy.
  - » *The "destination" days will be highlighted in red.*




- ▶ Confirm by pressing the  icon.

Scheduling icons		
		
scheduling NOT PRESENT	memorised scheduling NOT ACTIVE	memorised scheduling active

Some icons can be used to indicate whether a schedule linked to a specific function is present.

## DIMMER LIGHTS

 
### DIMMABLE LIGHTS (adjustable intensity)

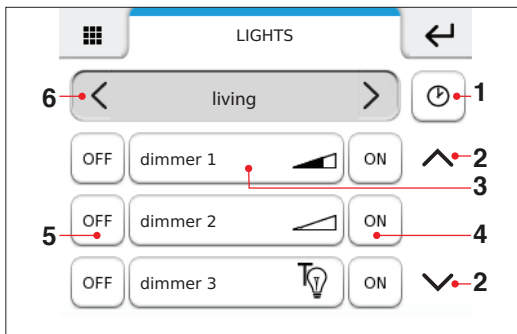

1. Scheduling icon
2. Scroll screen icons
3. Exit icon
4. ON icon
5. OFF icon
6. Area selection




 
- ▶ Press **ON** / **OFF** to switch the corresponding output on / off.
  - » *The indicator is completely empty when the output is off.*
- ▶ Press and hold **ON** / **OFF** to adjust the light intensity.
  - » *The intensity indicator fills up gradually as the light intensity increases.*
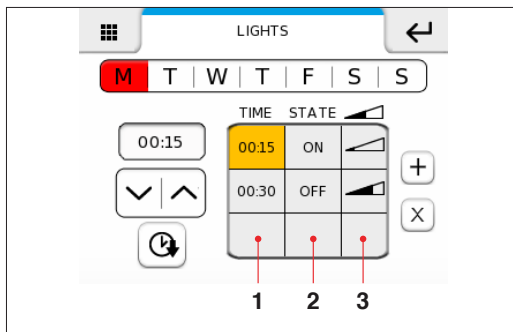
### DIMMER LIGHT SCHEDULING



 1. Times column
  2. Status column (ON / OFF)
  3. Intensity adjustment column
- ▶ Set the time and status as described in the paragraph "SCHEDULING" on pag. 37.
  - ▶ Set the desired intensity using the same entry methods.

#### dimmer scheduling icons

	off
	maximum intensity
	scheduling present and active
	scheduling present but not active


## DIMMER / PRESENCE LIGHTS
 
### DIMMER / PRESENCE LIGHTS



(adjustable intensity / presence sensor)

- The PRESENCE DIMMER function, using a motion sensor, can be used to increase the brightness of the dimmer light if presence is detected, and to decrease it to the courtesy level - or switch it off - if no presence is detected.

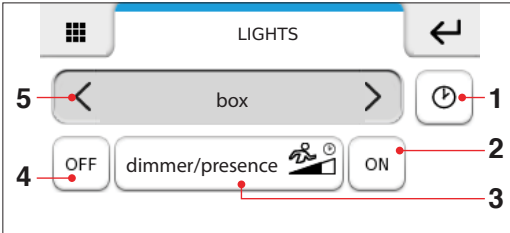

- Scheduling icon
- ON icon
- Exit icon
- OFF icon
- Area selection

dimmer / presence icons	
	presence function active
	presence function not active (the light functions as a normal dimmer)
	scheduling present and active (the light functions as a scheduled dimmer)
	scheduling present but not active

### Switching the presence sensor on / off.

- Press the icon corresponding to the output (3) to enable or disable the presence function (presence function disabled = operation as normal dimmer).

### Presence detected:

- The output comes on (at the last light intensity value set) for a pre-established period of time.
- Press and hold commands can be used to dim the value (only while the output is still active).
- When the presence sensor is ON, the output cannot be controlled with ON/OFF press and release commands.

 
### Presence not detected:

- A courtesy value can be set for activation under the "absent" condition (presence not detected).
- When the time period has elapsed, the output will revert to the courtesy value.

## DIMMER / PRESENCE LIGHT SCHEDULING



- Presence sensor activation automatically omits scheduling (even if present!).

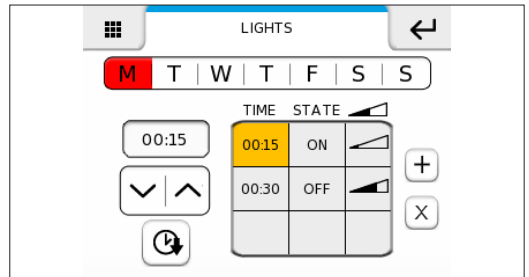


- Schedule as described in the paragraph "DIMMER LIGHT SCHEDULING" on pag. 39.



## RGB LIGHTS

 
RGB LIGHTS (adjustable colour and intensity)

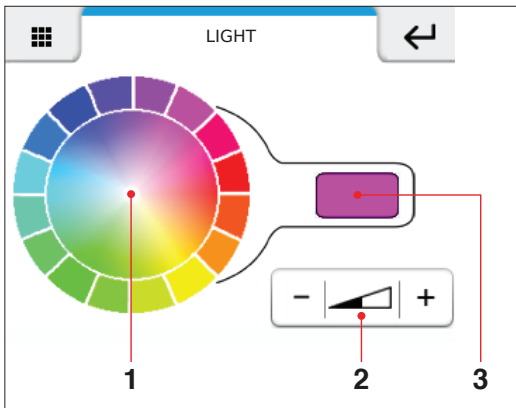

1. Colour spectrum
2. Dimmer intensity adjustment
3. Selected colour indicator

- ▶ Select the colour by pressing the colour spectrum indicator.
- ▶ Adjust the intensity to the desired level by pressing the **-** **+** icons.
- ▶ For more precise colour selection, press the indicator for the selected colour (3), then enter the numerical RGB values on screen.

## RGB LIGHT SCHEDULING

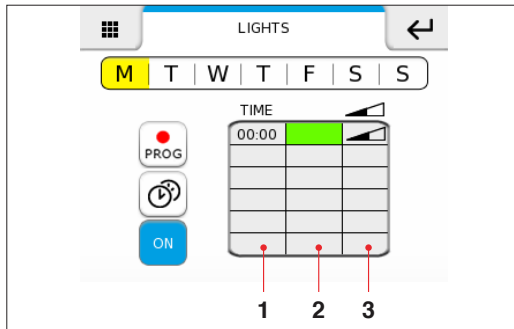 


1. Times column
2. RGB colour column
3. Intensity column ( = OFF)

- ▶ Schedule by entering the desired times as described in the paragraph "SCHEDULING" on pag. 37.
- ▶ Set the colour and intensity values using the same method.

## CLIMATE CONTROL

 
The climate section can be used to monitor, adjust and program the temperature of rooms.



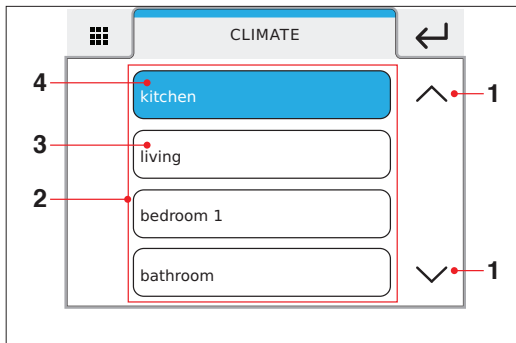

► Press  to access the climate menu.



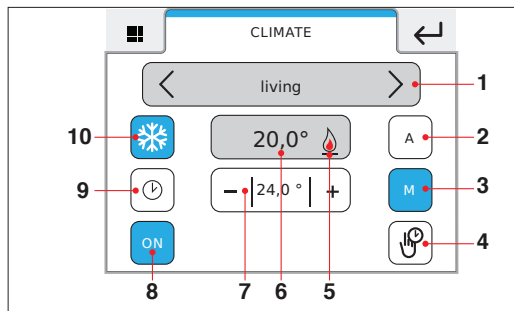 



1. Scroll screen icons
2. List of available rooms
3. Room with air conditioning off
4. Room with air conditioning on


► Select the desired room by pressing the corresponding icon.



1. Room selection
2. Automatic mode icon
3. Manual mode icon
4. Manual forcing icon
5. Boiler  / air-conditioner  on indicator
6. Room temperature detected
7. Desired temperature adjustment
8. Selected room/on/off icon
9. Scheduling menu icon
10. Summer  / winter  mode selection

► Press  /  to switch the system on / off.

► Press  /  to activate automatic / manual mode respectively.


» The active icon turns blue  / .

► Press  /  to change mode.

## CLIMATE FORCING

 If necessary, it is possible to force programming (automatic or manual) for a set period of time (hours or days).

- ▶ In the menu for the relevant area, press the  icon.

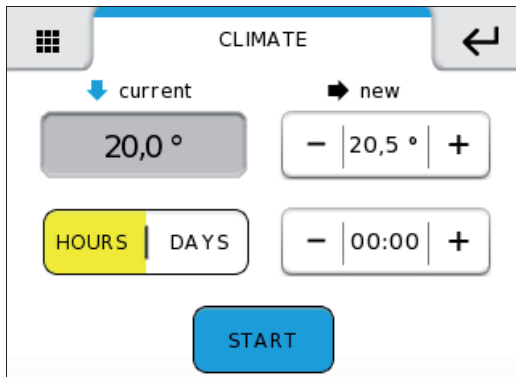

- ▶ Set the temperature and forcing period duration values, then press START.


» *The START icon is replaced.*



» *The icon  will turn blue .*


- Once the forcing cycle has finished the system will revert to the mode set previously (Automatic or Manual).

## CLIMATE SCHEDULING

 
- ▶ Press  on the climate screen to access the climate scheduling function.




- Daily climate control programming must refer to the whole 24-hour cycle; any hours not programmed by the user will be set by the system automatically.

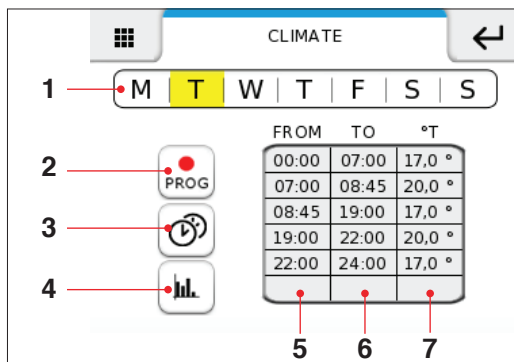

1. Days of week band
2. Programming icon
3. Copy program icon
4. View programming histogram icon
5. Start time column (FROM)
6. End time column (TO)
7. Temperature column

 - ▶ Select the desired day of the week by pressing the corresponding icon on the band at the top (1); then press the programming icon .

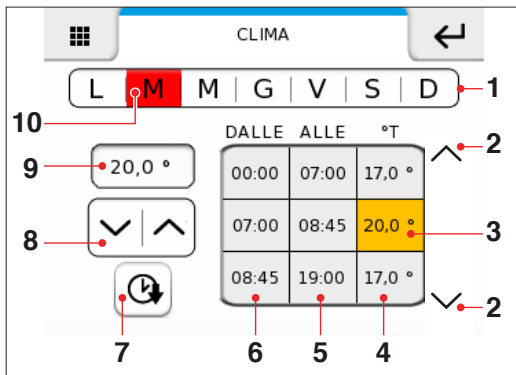

1. Days of week band
2. Screen navigation icons
3. Selected box
4. Desired temperature column (T°)
5. End time column (TO)
6. Start time column (FROM)
7. Confirm icon
8. Change selected value icon
9. Selected value icon
10. Selected day

▶ Set the desired time bands in the end time column (5), assigning the selected temperature to each using the change value icons.


▶ Always confirm each entry using the confirm icon



• It is possible to only adjust the "TO" end time column; the programming start values will be generated automatically by the system.

▶ To change a value entered previously, select the desired value - highlighted in yellow (3) - then make the changes using the value change icons (8).


## COPYING PROGRAMMING

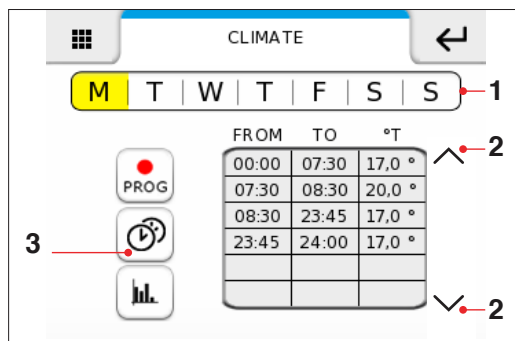 



1. Days of week band
2. Screen navigation icons
3. Copy program icon

 
▶ Select the day of the week to copy from the band at the top.

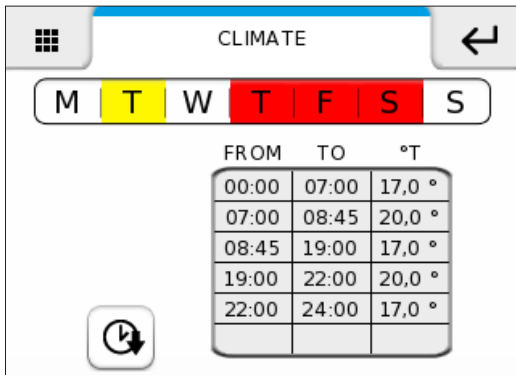
» *The original day is highlighted in yellow.*



- ▶ Press the  icon and select the days of the week to which you want to apply the copy.
  - » *The "destination" days will be highlighted in red.*
- ▶ Confirm by pressing the  icon.

## CLIMATE PROGRAMMING GRAPH MODE

 
- ▶ Press the  icon to view the climate programming graphics screen.

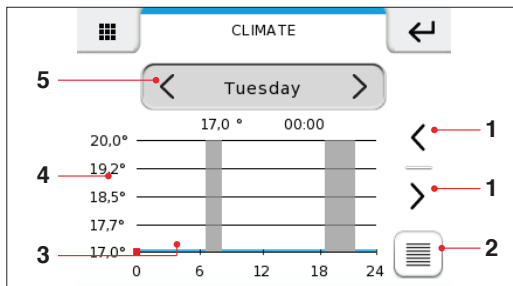

1. Time band selection icons
2. Revert to table view
3. Time axis
4. Temperature axis
5. Days of the week selection


## LOADS

 - Press the loads icon  to access the specific area.

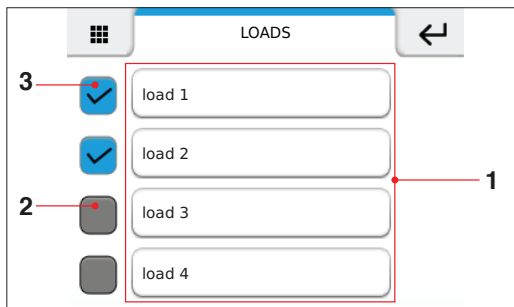


1. List of available loads
2. Load deactivated
3. Load active

- The system constantly checks the power absorbed by the system.
- If the value detected reaches or exceeds a set safety level, the system cuts off active loads to lower the total absorption value.
- The system then automatically reactivates the loads in line with the system absorption capacity.

- Press the  icon to activate the function for the desired load.


» *The icon turns blue* .


- Press the  icon to deactivate the function for the desired load.

» *The icon turns grey* .

## CONSUMPTION

 The consumption function can be used to monitor consumption via graphs and tables.

- ▶ Press the  icon to access the consumption menu.

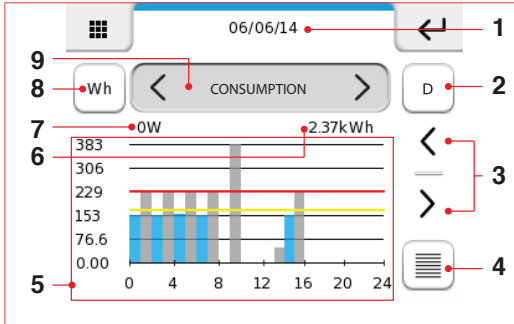


1. Period displayed
  2. Change displayed time interval icon (Day / Month / Year / Log)
  3. Scroll through available days / months / years / log
  4. Change display (graph / table)
  5. Consumption / time graph area
  6. Total value of consumption in graph
  7. Instant consumption value
  8. Change unit of measurement / currency
  9. Scroll through available meters
- If the maximum consumption thresholds are set, the consumption limits are shown:
  - In "graph" mode: yellow line 75% of the consumption threshold; red line 100% of the consumption threshold.
  - In "table" mode: the boxes are coloured to indicate the consumption level.

Period	kWh
0-1	0.001
1-2	475.0
2-3	596.0

from 0% to 75%  
from 75% to 100%  
over 100%

## CONSUMPTION / PRODUCTION COMPARISON

 
If production units are fitted (e.g. photovoltaic panels), the system can provide a comparison between production and consumption.

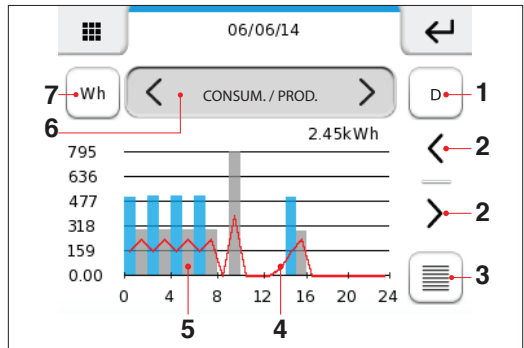


1. Change displayed time interval icon
2. Scroll through available days / months / years
3. Change display (graph / table)
4. Production graph
5. Consumption graph
6. Scroll through available graphs
7. Unit of measurement / currency indicator.

## SCENARIOS

 
The scenarios function can be used to activate previously programmed scenarios (along with conditions relating to the home automation system devices).

- Press the  icon to access the scenarios menu.

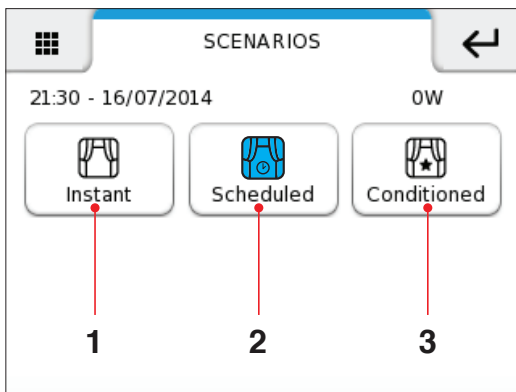


1. Instant scenarios icon
2. Scheduled scenarios icon
3. Conditioned scenarios icon

 - Press one of the three icons to access the desired scenarios menu.

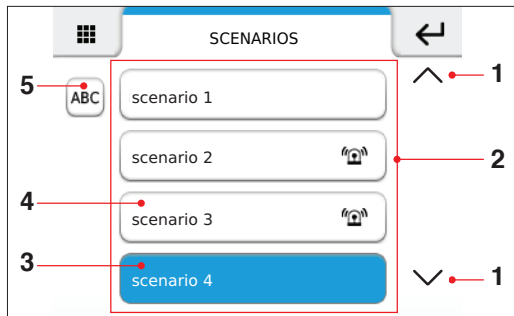

1. Scroll screen icons
2. Scenarios available
3. Scenario active
4. Scenario inactive
5. Rename scenario icon


• The  icon denotes the presence, within the scenario, of a function linked to the anti-intrusion system.

• To create / rename / change / delete scenarios, see "SETUP - SCENARIOS" on pag. 64.




## ACTIVATING A SCENARIO

 - ▶ Press the icon for an inactive scenario to activate it.
- ▶ Confirm the activation.

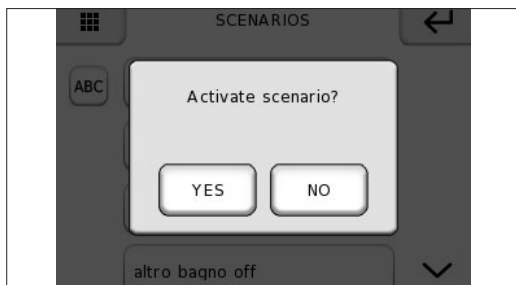



## DEACTIVATING A SCENARIO

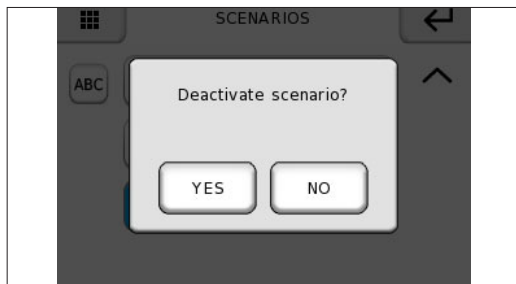 
- ▶ Press the icon for an active scenario to deactivate it.
- ▶ Confirm the deactivation.




## RENAMING A SCENARIO

 
- ▶ Press the  icon.
  - » *The icon turns blue .*
- ▶ Select the scenario you wish to rename.
- ▶ Use the virtual keypad to rename the scenario as desired.



- ▶ Confirm the change by pressing the  icon.


## SETUP MENU DESCRIPTION

► Press  to access the setup menu.

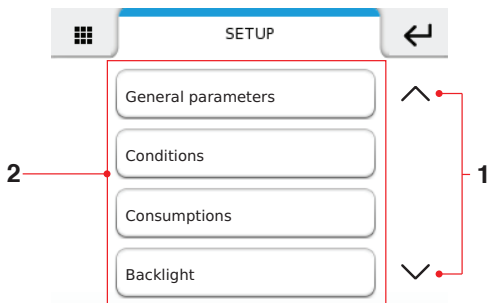

1. Scroll menu icons
  2. Setup menu options available
- To access the desired sub-menu, press the icon for the corresponding menu.
- » *The available options are: General parameters / Conditions / Consumption / Backlight / Buzzer / Anti-intrusion / Scenarios / Key / Protection / Advanced.*

## SETUP - GENERAL PARAMETERS

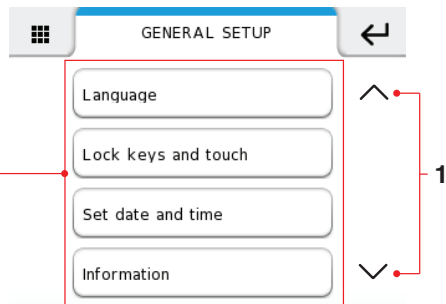 

1. Scroll menu icons
  2. General parameters menu options available
- To access the desired sub-menu, press the icon for the corresponding menu.
- » *The available options are: Language / Lock keys and touch / Set date and time / About.*


## LANGUAGE

 The interface language can be changed.



1. Scroll menu icons
2. Languages available
3. Language selected

- ▶ Select the desired language by pressing the relevant icon.

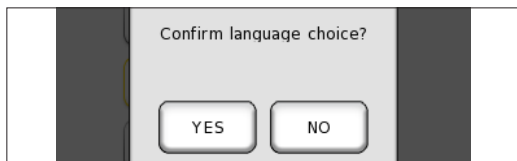


- ▶ Confirm your choice.



- When a Vedo control panel is fitted, the language is set automatically to match the one used by the control panel itself, ignoring the selected option.


## LOCKING THE KEYPAD AND TOUCH SCREEN

 The function can be used to lock the device touch screen for 60 seconds, for cleaning purposes.

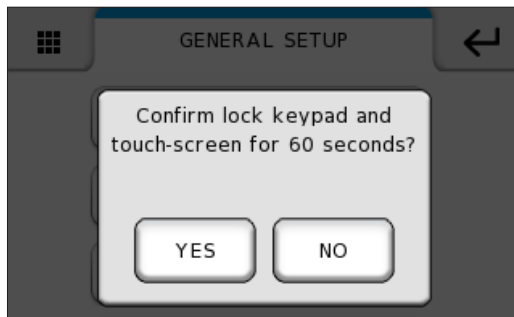


- ▶ Confirm the process.
  - » *When the period of 60 s has elapsed, the device unlocks automatically.*

## SETTING THE DATE AND TIME

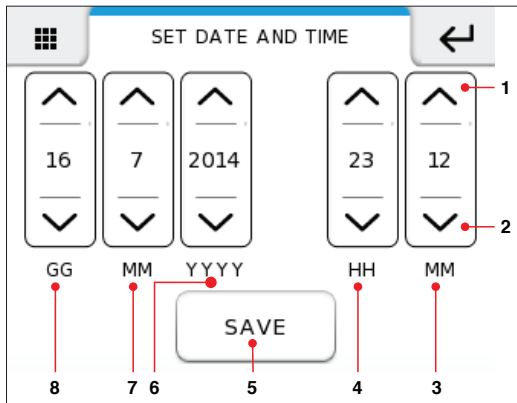 

1. Increase value icon
2. Decrease value icon
3. Minutes column
4. Hours column
5. Save icon
6. Year column
7. Month column
8. Day column

 ✓ If an alarm control panel is fitted, time setting becomes an alarm function and therefore requires the alarm password; changes affect the control panel.

- ▶ Set the desired values for the day / month / year / hours / minutes options using the  $\wedge$  /  $\vee$  icons.
- ▶ When you have finished, save the new configuration using the  button.




- When a Vedo control panel is fitted, the device automatically receives time and date setting information from the alarm control panel (changes still affect the device and other supervisors connected).
- Otherwise, the function for setting automatic DST/ non-DST time switching is also enabled, with the option of customising the dates or using the standard European settings.

## ABOUT

 
The menu provides information on the software version installed.



- ▶ Press  to exit the screen.

## SETUP - CONDITIONS

Some previously programmed conditions can be enabled / disabled.

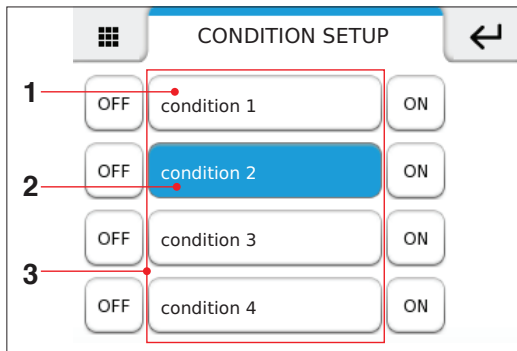

1. Condition inactive
2. Condition active
3. List of available conditions

▶ Press the  icon to enable the desired condition.


» *The icon showing the name of the condition turns blue.*

▶ Press the  icon to disable the desired condition.

» *The icon showing the name of the condition turns white again.*

## SETUP - CONSUMPTIONS

 The consumption menu can be used to manage various options linked to consumption.

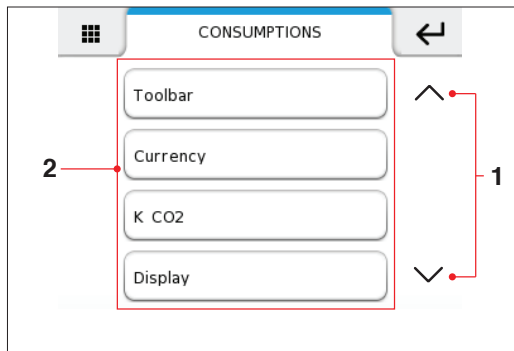


1. Screen navigation icons
2. List of available options

» *The options available are: Toolbar / Currency / K CO2 / Display / Rates / Thresholds / Reset / Settings.*


▶ Press the icon for the desired function to open the corresponding menu.


## TOOLBAR

 You can select which meter to view - from the available options - using the main menu toolbar.

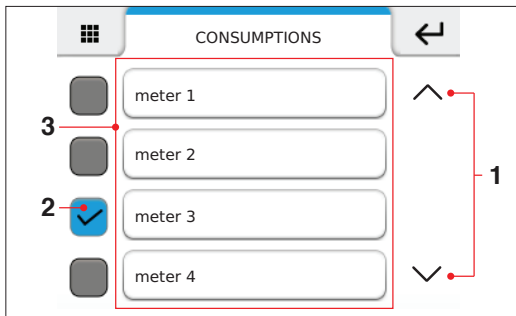

1. Screen navigation icons
2. Selected meter
3. List of available meters

▶ Press the  icon corresponding to the desired meter to select it.

» *The icon turns blue* .





• Only one meter can be selected at a time!


## CURRENCY

 You can select the desired currency for viewing costs linked to consumption.

✓ To view consumption, the rates must be set (see SETUP / CONSUMPTIONS / RATES).

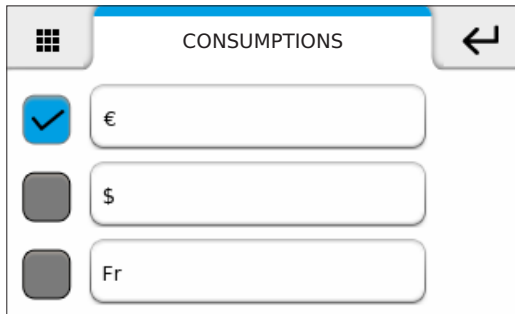


▶ Press the  icon corresponding to the desired rate to select it.

» *The icon turns blue* .





If you select the option CUSTOMISED, you can give a customised name of 3 letters/digits to the currency.

- ▶ Enter the desired name, then confirm by pressing the  icon.

## K CO<sub>2</sub>

 
If energy production systems (photovoltaic, etc.) are fitted, you can enter the CO<sub>2</sub> constant in order to monitor the CO<sub>2</sub> not released into the environment.

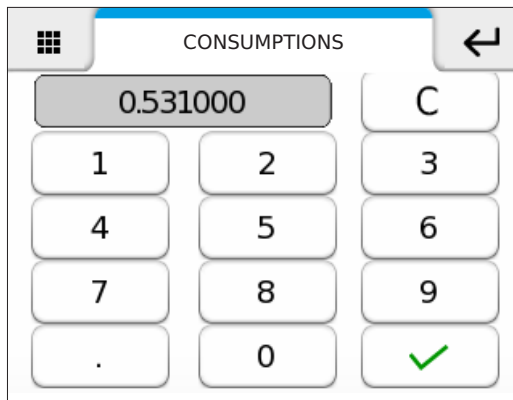

- ▶ Set the desired K CO<sub>2</sub> value, then confirm with .
- ✓ Consult the system installer regarding the K CO<sub>2</sub> value.

## DISPLAY

 You can select which meters to view from the available options.

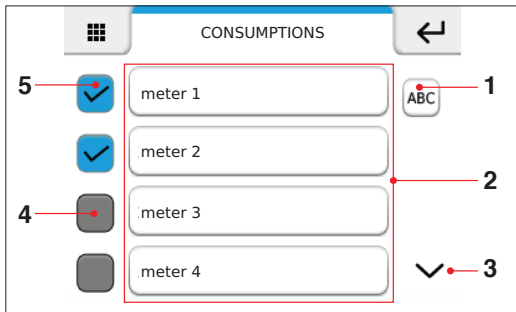

1. Change meter name icon
2. List of available meters
3. Scroll screen icons
4. Deselected meter
5. Selected meters

► Press the icon to select the desired meter.

» *The icon turns blue* .

► Press the icon to deselect the meter.

» *The icon turns grey* .



• Several meters can be selected at once!

## DISPLAY - RENAME METER

The meters can be renamed.

► Press the icon, then select the meter you wish to rename.



 
► Enter the desired name, then confirm by pressing the icon.




## RATES

The meter rates can be set according to time bands.


» *The information will be used to construct the consumption graphs in the Consumption menu.*

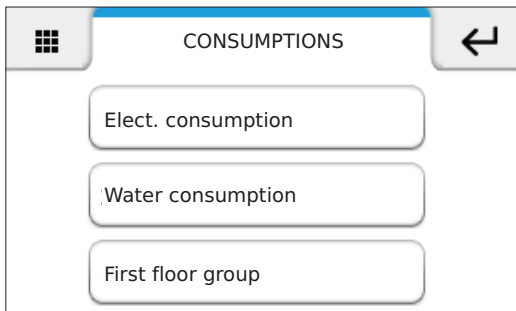

» *Select the desired meter.*

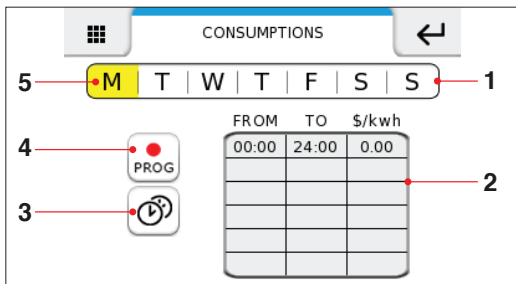 





1. Days of week bar
2. Time / price table
3. Copy program icon
4. Programming icon
5. Selected day

- ▶ Select the desired day and press the  icon to enter the programming screen.

 The previously selected day can be changed by pressing the bar above the corresponding icon.

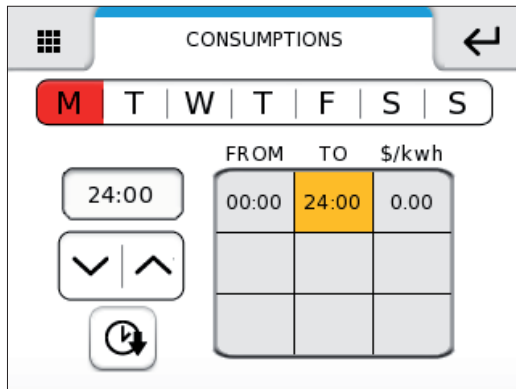» *The selected day or days are highlighted in red.*



- ▶ Select the desired time, set the time using the  |  keys and press  to confirm.

 
» *The feature being changed will be highlighted in yellow.*




• Daily rate programming should refer to the entire 24-hour period of one day! Any hours not programmed by the user will automatically be set by the system.



▶ Set the desired unit price.

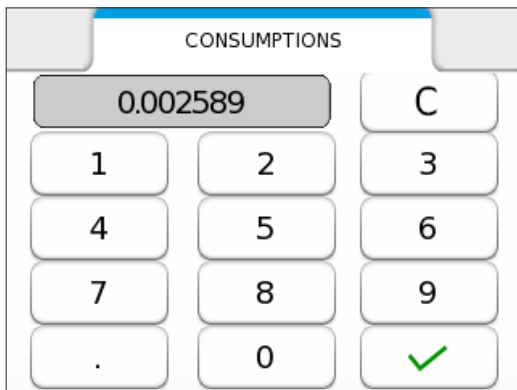
- EXAMPLE: set the cost of 1 kWh with a value of 20 Euro cents per unit.
- 2 cent/euro = 0.020 €
- enter the value 0.020 on the screen



▶ Enter the desired value, then confirm by pressing the  icon.

Programming can be copied from a specific day to other days of the week:

 
- ▶ Press the  icon.
- ▶ Select the desired days using the bar at the top.
- ▶ Confirm copying by pressing the  icon.

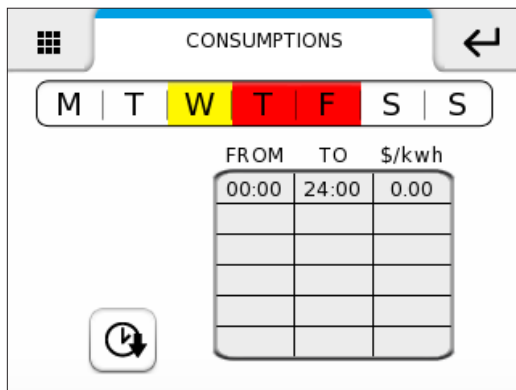

## THRESHOLDS


The maximum consumption thresholds can be set by Hour / Day / Month / Year in order to obtain instant visual feedback, on the graph and in the consumption table, as to whether the threshold set for that period has been exceeded.

 - » In "graph" mode: yellow consumption line from 75% to 100% of the set threshold, red consumption line over 100% of the set threshold.
- » In "table" mode: the boxes are coloured using the same criteria to indicate the consumption level.

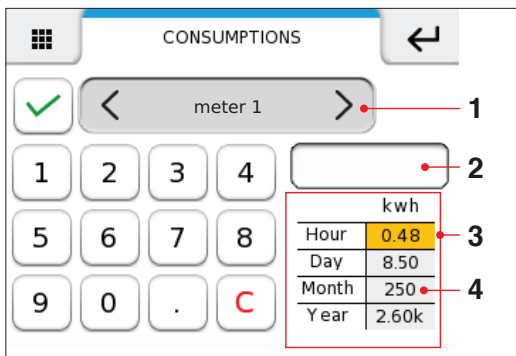


1. Select meter
2. Value entered / set
3. Period / threshold table with set threshold values
4. Selected threshold value

To change one or more thresholds:

1. Select the desired meter.
2. Select the desired value.
3. Enter the new value for that period.
4. Confirm with the  icon.

## RESET (METERS)

 The reset function resets all meters.

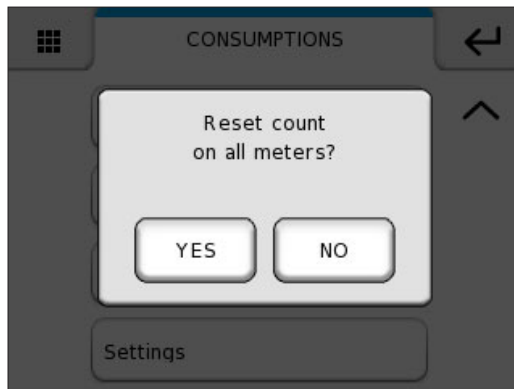


- Confirm the reset.


» *The meters will be set back to zero.*

## CONSUMPTIONS - SETTINGS

 The function can be used to change some features of the installed meters.

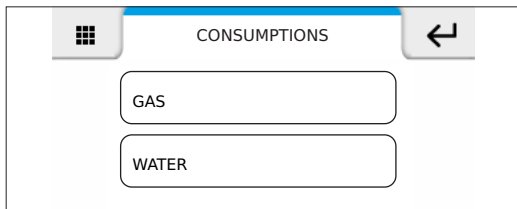

 
- ▶ Select the desired meter from the available options.
- » *A panel opens, showing the adjustable features of the meter.*

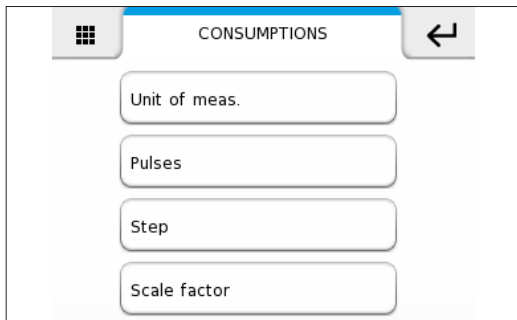

- ▶ Select the feature to be changed:


## CONSUMPTIONS - SETT. - UNIT OF MEASUREMENT



 
- ▶ Enter the desired value, then confirm by pressing the  icon.


## CONSUMPTIONS - SETT. - PULSES


- ✓ EXAMPLE: the pulse meter measures 1 mc every 10 pulses; set the PULSE and INCREMENT options with values 10 and 1 respectively.

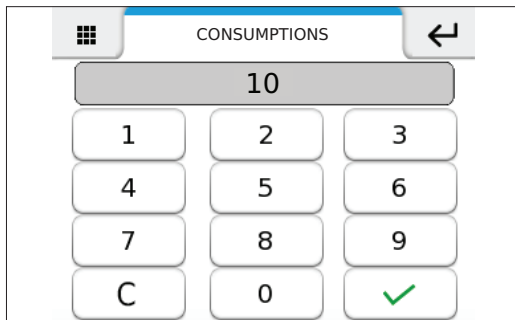

- ▶ Enter the desired value, then confirm by pressing the  icon.


## CONSUMPTIONS - SETT. - INCREMENT

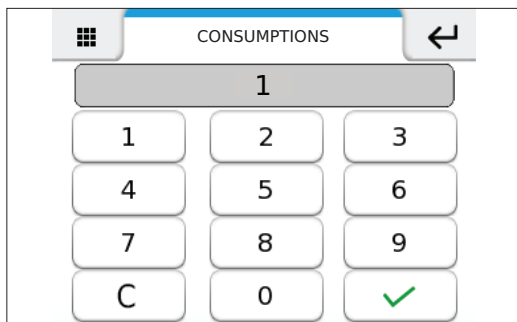 


- ▶ Enter the desired value, then confirm by pressing the  icon.

## CONSUMPTIONS - SETT. - SCALE FACTOR

 
- This parameter is used to set conversion of the unit of measurement displayed. For example, if using a calorie meter for heating systems but you want to see the information in Joules.

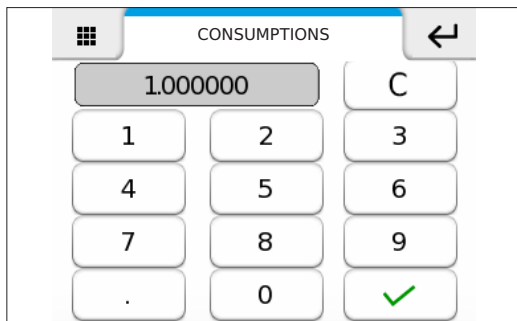


- ▶ Enter the desired value, then confirm by pressing the  icon.

## SETUP - BACKLIGHT

 The device has an LED backlighting system that interacts according to the status of the climate zones in the system, the status of the anti-intrusion system or in conjunction with the colour-adjustable walkway lighting function.

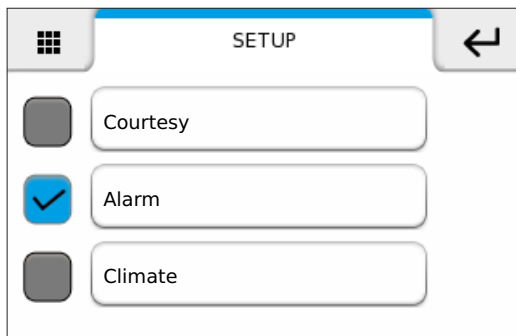


- ▶ Press the  icon to enable functions.

» *The icon turns blue* .



## COURTESY MODE

 Light with adjustable colour and intensity.

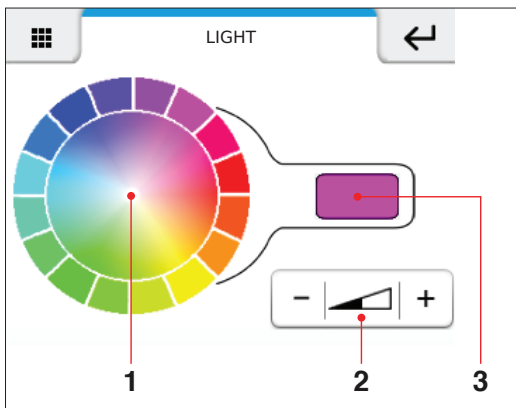- ▶ Press the icon to access the dedicated adjustment panel.



1. Colour spectrum
2. Dimmer intensity adjustment
3. Selected colour indicator

- ▶ Select the colour by pressing the colour spectrum indicator.
- ▶ Adjust the intensity to the desired level by pressing the   icons.
- ▶ For more precise colour selection, press the indicator for the selected colour (3), then enter the numerical RGB values on screen.

## ALARM MODE

The function allows the device to use the LEDs to signal an alarm event.

1. STEADY RED: alarm memory.
2. BLINKING RED: alarm in progress.

- Dimmer light intensity adjustment > "COURTESY MODE" on pag. 62

## CLIMATE MODE

The function allows the device to use the LEDs to signal the climate control function statuses.


1. BLUE: climate on in summer mode.
2. YELLOW: climate on in winter mode.

- Dimmer light intensity adjustment > "COURTESY MODE" on pag. 62

## SETUP - BUZZER


The function can be used to activate / deactivate device touch screen feedback.

 



► Press  to enable the buzzer.

» *The icon turns blue* .

## SETUP - ANTI-INTRUSION


► Enter the alarm password, then confirm by pressing the  icon.

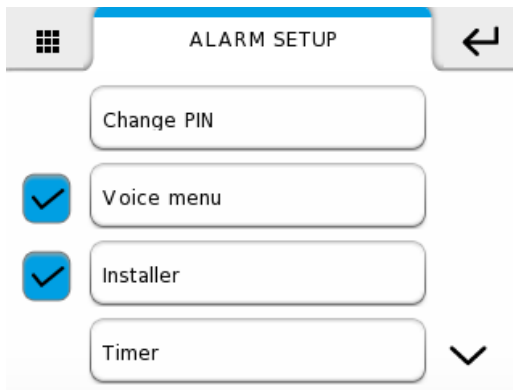

- The SETUP / ANTI-INTRUSION section of the menu corresponds to the ALARM / SETTINGS (  ) / OPTIONS section of this manual.
- REFER TO THE ALARM SECTION for a detailed description of the menu functions.


## SETUP - SCENARIOS

 The menu can be used to create, rename, change or delete one or more scenarios in one of the three available categories.

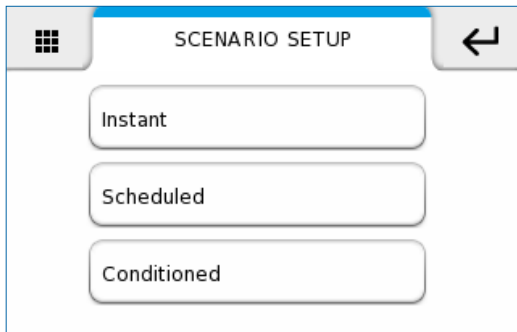

- ▶ Press the corresponding icon to open the desired category.


## SETUP - INSTANT SCENARIOS

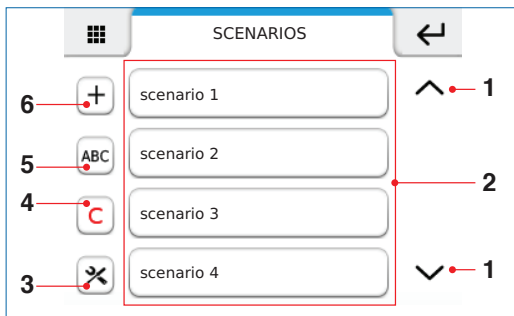 

1. Scroll screen icons
2. Scenarios available
3. Change scenario icon
4. Delete scenario icon
5. Rename scenario icon
6. New scenario icon


## ACTIVATING SCENARIOS

  
- ▶ Press the icon corresponding to the desired scenario to run it.

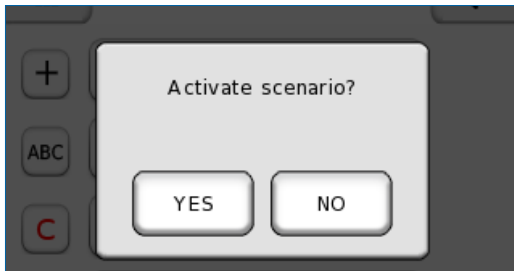




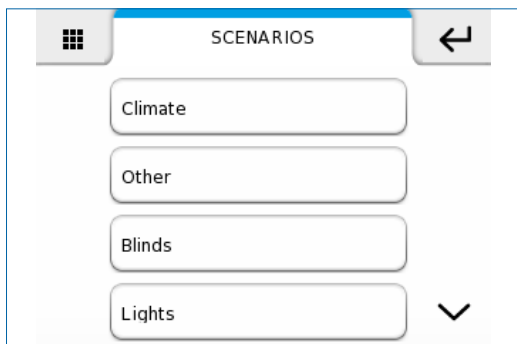 
## CREATING A NEW SCENARIO

- ▶ Press the new scenario icon .

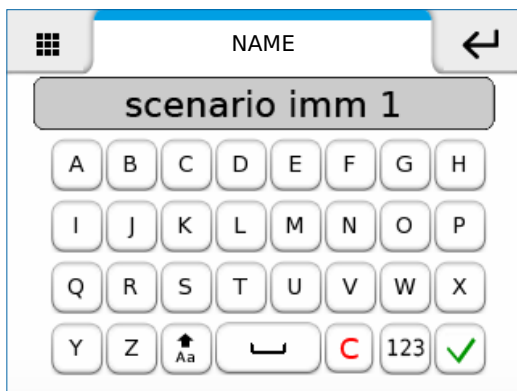

- ▶ Assign a name to the scenario, then confirm by pressing the  icon.

 
» A screen shows the functions available when the scenario is activated.




» The functions that can be associated with a scenario are: Climate / Other / Blinds / Lights / Irrigation / Automations / Video system / Alarm.


- ▶ Press the icon for the desired function to associate it with the scenario.

» The panel corresponding to the selected function opens; this can be used to choose which specific features of the function to enable (e.g. zones, scheduling, status...).

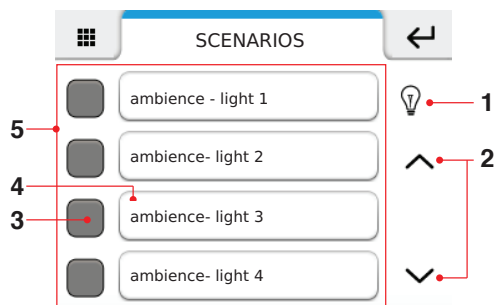


1. Icon identifying the selected function
2. Scroll screen icons
3. Select room / output icon
4. Icon with room name / name of individual output
5. Rooms / outputs available

 
- ▶ Press the  icon to select the entire room.

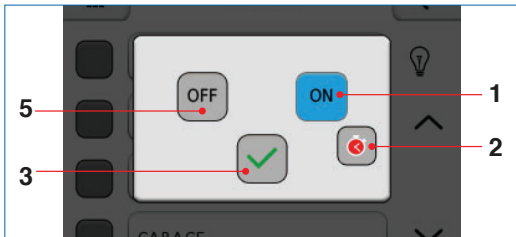



1. On status icon
2. Scenario delay
3. Confirm icon
4. Off status icon


► Set the desired status by pressing the corresponding icon, then confirm with .

 One or more individual outputs can be entered in a scenario:

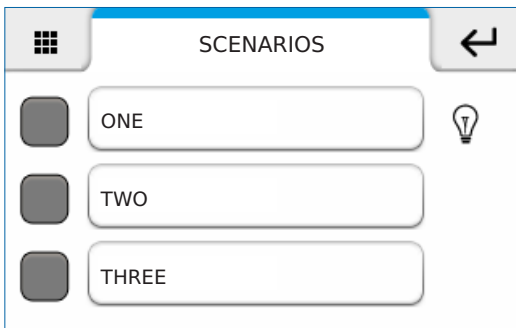

► Press the icon with the name of the zone / room, then select the desired outputs using the .



► Set the desired status by pressing the corresponding icon, then confirm with .

 
» The icons will turn blue .




- For BLINDS, the ON / OFF icons are replaced by the   icons respectively.
- For RGB and DIMMER LIGHTS, there will also be colour and intensity adjustment icons.
- For the ALARM function, the ALARM CODE must be ENTERED before you can enable the desired alarm function.
- For a detailed description of each function (Alarm / Climate / Other / Blinds / Lights / Irrigation / Automations), refer to the specific chapters in the manual.


► Once you ave finished entering the desired functions, press the  icon to exit.

» A confirmation screen opens.

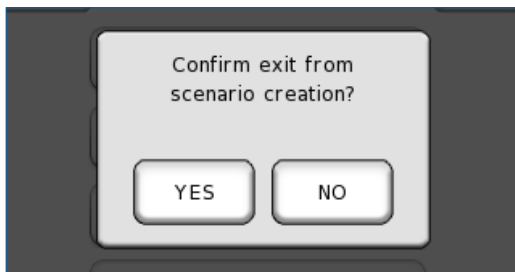


- ▶ Confirm the process.

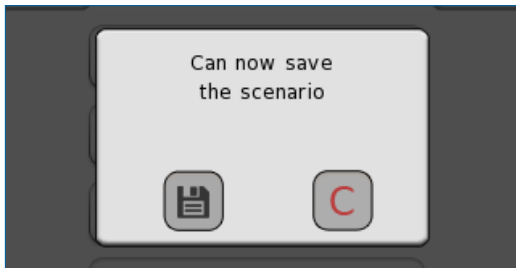 

- ▶ Press  to save the changes made to the scenario.


» *The system returns to the selected scenario menu. (Instant / Scheduled / Conditioned)*

- ▶ Press  to cancel the changes made to the scenario.





» *The system returns to the selected scenario menu. (Instant / Scheduled / Conditioned)*

## SCENARIO DELAY



By entering a delay time, the commands entered in a scenario can be executed with a pre-set delay. For example, the outside lights of a walkway can be switched on in sequence, one every 5 seconds. To do so, set a delay of 5 seconds on the second light, a delay of 10 seconds on the third light, etc...

 
- ▶ In the window used to enter the function as part of the scenario, press the scenario delay icon .



- ▶ Set the desired delay time using the  and  icons (minutes : seconds), then confirm by pressing the  icon.
  - » *The icon  will turn green.*



## DELETING A SCENARIO

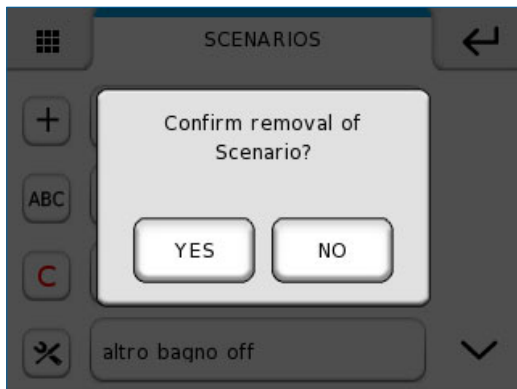- ▶ Press the delete scenario icon .
- » The icon turns blue .
- ▶ Press the icon for the scenario you wish to delete.




- » The system returns to the selected scenario menu (Instant / Scheduled / Conditioned).



## RENAMING A SCENARIO

 
- ▶ Press the rename scenario icon .
- » The icon turns blue .
- ▶ Press the icon for the scenario you wish to rename.




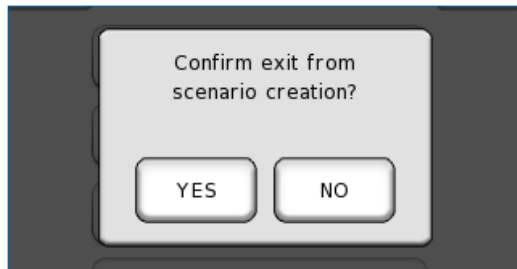 
- ▶ Rename the scenario, then confirm by pressing the  icon.

## CHANGING A SCENARIO

 
- ▶ Press the change scenario icon .
- » *The icon turns blue .*
- ▶ Press the icon for the scenario you wish to change.

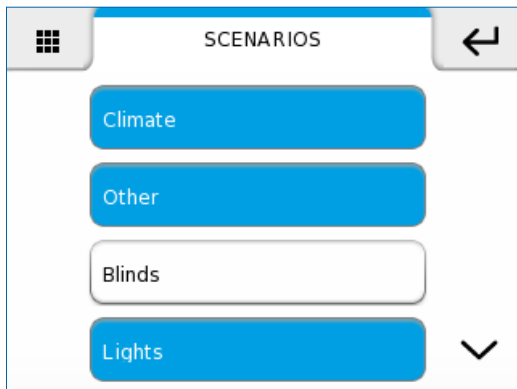



- ▶ Change the desired information.
- If one or more characteristics of a function are enabled, the icon will appear in blue.
- ▶ Press the  icon when you have finished making changes.
  - » *A confirmation screen opens.*

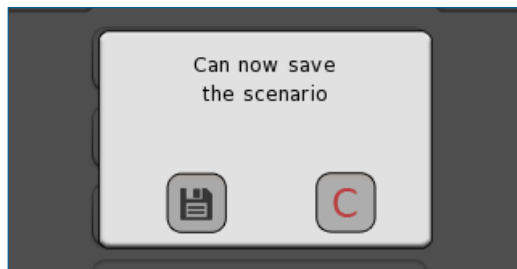


- ▶ Confirm the process.




- ▶ Press  to save the changes made to the scenario.
  - » *The system returns to the selected scenario menu. (Instant / Scheduled / Conditioned)*
- ▶ Press  to cancel the changes made to the scenario.
  - » *The system returns to the selected scenario menu. (Instant / Scheduled / Conditioned)*


## CLIMATE SCENARIO

 - ▶ Press the icon for the climate function to associate it with the scenario.

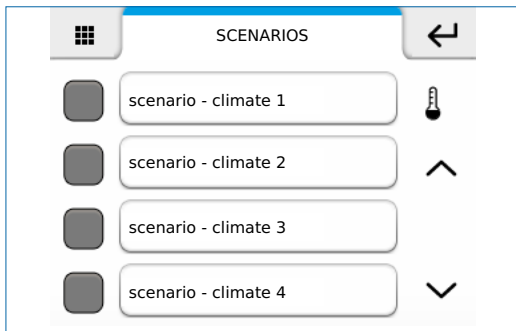


- ▶ Press the  icon to select the corresponding room as desired.

 » A screen opens, showing the programming details for the selected room.

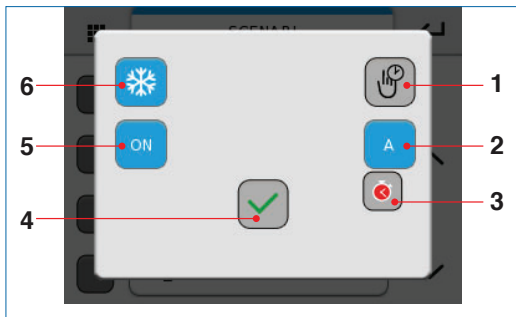


1. Timed custom mode forcing
2. Automatic / manual mode
3. Scenario delay
4. Confirm changes icon
5. On / Off icon
6. Summer / winter mode icon (heating / cooling)

- ▶ Make the necessary changes, then confirm by pressing the  icon.

» The system returns to the screen showing the available climate rooms.

» The icon for the room included in the scenario turns blue.

## SETUP - SCHEDULED SCENARIOS

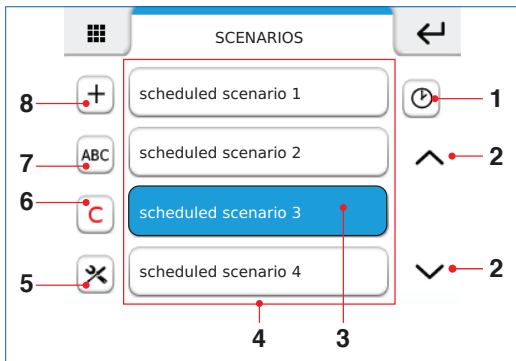 


1. Scheduling icon
2. Scroll screen icons
3. Active scenario
4. Scenarios available
5. Change scenario icon
6. Delete scenario icon
7. Rename scenario icon
8. New scenario icon

## CREATING A NEW SCHEDULED SCENARIO

  
► Carry out the steps described in the paragraph "CREATING A NEW SCENARIO" on pag. 65; press the icon to exit once the desired functions have been entered.

» *The system opens the scenario scheduling screen.*

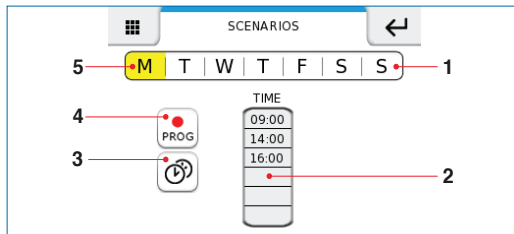





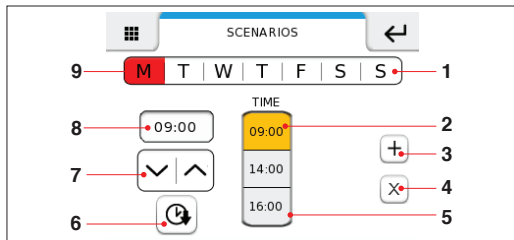

1. Days of week bar
2. Time programming table
3. Copy program icon
4. Programming icon
5. Selected day




► Press the programming icon to enter or change the programming.



1. Days of week bar
2. Selected time
3. Add time
4. Delete time
5. Table of times
6. Confirm
7. Time adjustment icons
8. Value set
9. Selected day

- ▶ To add a new time, press the  icon.
- » *A new time (00:00) appears in the table of times.*
- ▶ Adjust the time as desired using the   icons, then confirm by pressing the  icon.
- » *If there are several times they will automatically be arranged in chronological order.*
- ▶ Select one of the times in the table, then press the  icon to delete a time.
- ▶ When scheduling is complete, press the  icon to exit.

Programming can be copied from a specific day to other days of the week:

- ▶ Press the  icon.
- ▶ Select the desired days using the bar at the top.
- ▶ Confirm copying by pressing the  icon.
- ▶ Press the  icon when you have finished making changes.
- » *Follow the same exit procedure as used for non-scheduled SCENARIOS.*

## DELETING A SCHEDULED SCENARIO

See "DELETING A SCENARIO" on pag. 68.

## RENAMING A SCHEDULED SCENARIO

See "RENAMING A SCENARIO" on pag. 68.

 
## CHANGING A SCHEDULED SCENARIO

See "CHANGING A SCENARIO" on pag. 69.



• When you have finished making the changes, the scheduling screen opens (see SCHEDULED SCENARIOS).

## SETUP - CONDITIONED SCENARIOS

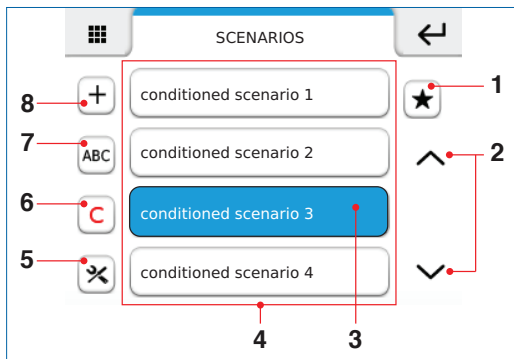


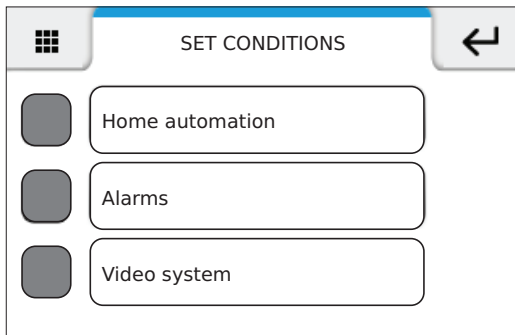 
1. Conditioning icon
2. Scroll screen icons
3. Active scenario
4. Scenarios available
5. Change scenario icon
6. Delete scenario icon
7. Rename scenario icon
8. New scenario icon



- The CONDITIONED SCENARIO can be used to run a scenario if one of the set events takes place. This may involve the VIDEO SYSTEM (example = in the event of a call from the external unit, the lights are switched on), ALARMS (example = if the sensors for a room do not detect any presence for 5 minutes, the lights in that room are switched off) or HOME AUTOMATION (example = if one of the inputs configured as "Input" in the programming software is closed, the associated scenario is activated).


## CREATING A NEW CONDITIONED SCENARIO

 - ▶ Carry out the steps described in the paragraph "CREATING A NEW SCENARIO" on page 65 and press the  icon to exit once the desired functions have been entered.
- » *The system opens the scenario condition setting screen.*




- ▶ Select the icon for the desired category to open the corresponding menu.

## HOME AUTOMATION CONDITIONS

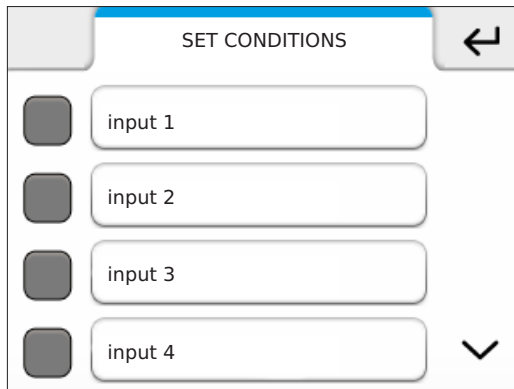


- ▶ Press the  icon to select the desired condition.

- » *The icon turns blue .*



 - Every condition linked to the HOME AUTOMATION function can be combined with just one single scenario. The system does not allow selection of home automation conditions which have already been combined with a conditioned scenario.

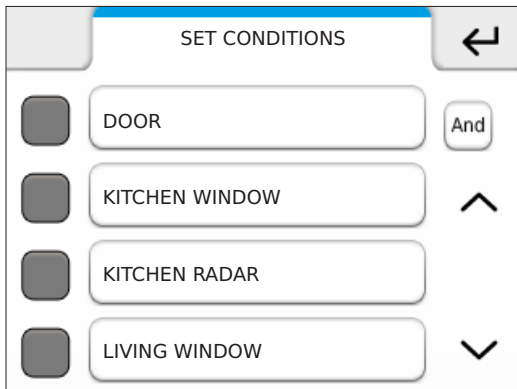

## ALARM CONDITIONS

 
 


- ▶ Press the icon to select the corresponding entrance as desired, from the available options.

» A screen opens for the selection of the desired status of the entrance.







- ▶ Press the icon corresponding to the desired status  
 /  (open / closed).


Other entrances can be selected. Set the AND / OR function to the desired value using the  /  icon.

 - ▶ Once selection is complete, press the  icon to exit.

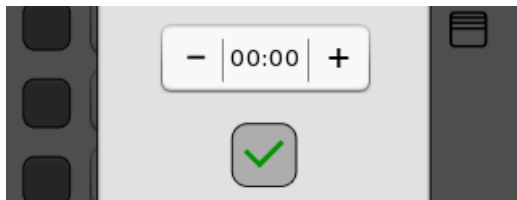» A screen opens, from which to select the timer linked to the selected status.



- ▶ Set the desired timer using the  and  icons (minutes : seconds), then confirm by pressing the  icon.

- ▶ Press the  icon when you have finished making changes.

» Confirm the output, then choose whether to save the changes made to the scenario.

## DELETING A CONDITIONED SCENARIO

See "DELETING A SCENARIO" on page 68.

## RENAMING A SCHEDULED SCENARIO

See "RENAMING A SCENARIO" on page 68.

 
## CHANGING A SCHEDULED SCENARIO

See "CHANGING A SCENARIO" on page 69.



- When you have finished making the changes, the scheduling screen opens (see CONDITIONED SCENARIOS).

## SETUP - KEY

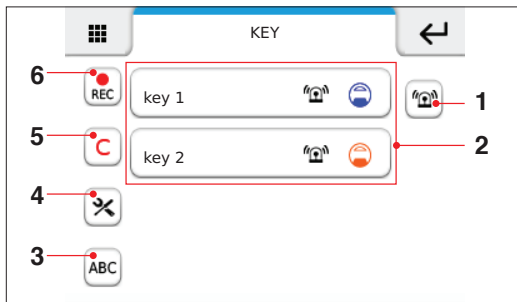


1. Register key on control panel icon
2. List of registered keys
3. Change key name icon
4. Change key function icon
5. Delete key icon
6. Register new key icon

## REGISTERING NEW KEYS

▶ Press the  icon.

» *The system shows the screen:*



 
▶ Pass the sensor key — or press  to cancel.





## REGISTERING A KEY ON THE CONTROL PANEL

Some functions need the key to be paired with the alarm control panel in order to work properly.

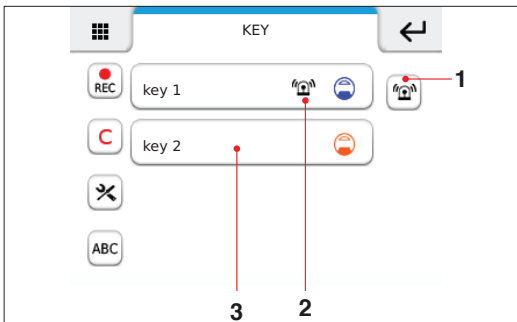» If the key is not registered, an alert screen appears:

 


1. Register key icon
2. Key registered with control panel icon
3. Key not yet registered with control panel icon

- ▶ On the main screen, press the  icon.
- » The icon will turn blue: 
- ▶ Select the key you wish to register.




- ▶ From the list of available options, select the user with whom you want to associate the key by pressing the corresponding icon.
- » The system shows a confirmation screen.

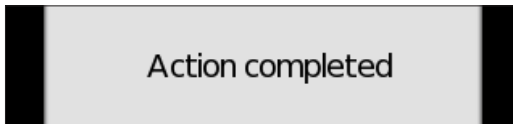


## DELETING A KEY

Any key created previously can be deleted.


- ▶ Press the  icon (the icon turns blue), then select - from the options available - the key you wish to remove.

 » *An alert window opens.*

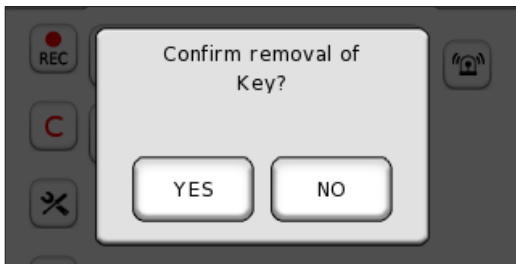

- ▶ Confirm the deletion.

 
» *The system confirms deletion.*

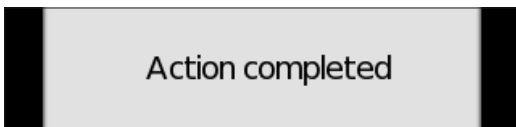



- Do not discard the key! The key has now been reset and is ready to be configured again.

## RENAMING A KEY

 
Any key created previously can be renamed.

- ▶ Press the  icon (the icon turns blue), then select - from the options available - the key you wish to rename.

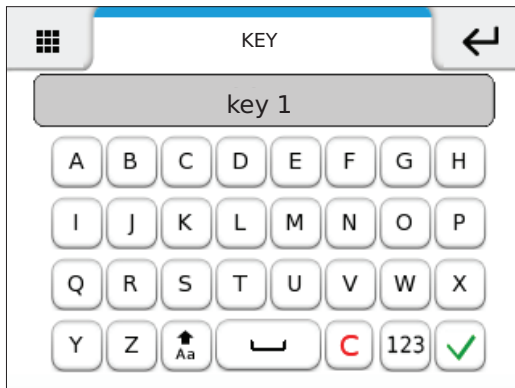


- ▶ Enter the desired name, then confirm with the .

 
» *The system confirms deletion.*

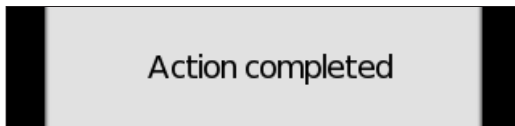


## ASSOCIATING A SCENARIO WITH A KEY


The functions associated with each key created can be changed.

 - ▶ Press the  icon (the icon turns blue), then select - from the options available - the key you wish to change.

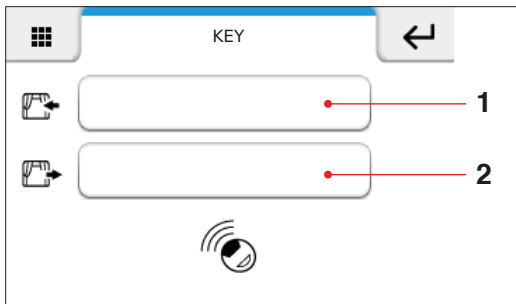

1. Entry scenario
2. Exit scenario

 
- ▶ Select the scenario you wish to change by pressing the corresponding icon.
- ▶ Choose the desired scenario from the available options by pressing the  icon.

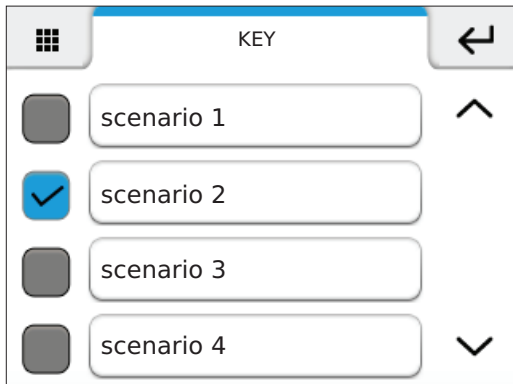


» The selected icon turns blue .



 
- Only instant type scenarios can be selected!
- Only 1 scenario can be selected at a time!

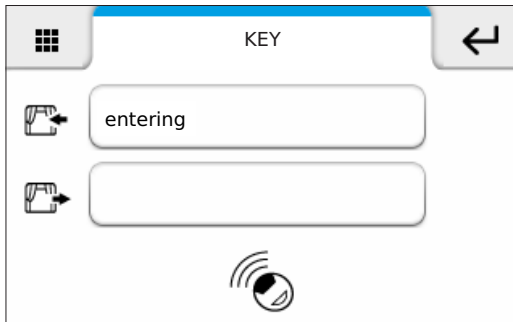

- ▶ Exit using the  icon to confirm the changes made.

## ACTIVATING SCENARIOS USING A KEY

 - ▶ To activate the scenario paired with a key, pass the key near the sensor —.
- » *The scenario activation screen appears.*

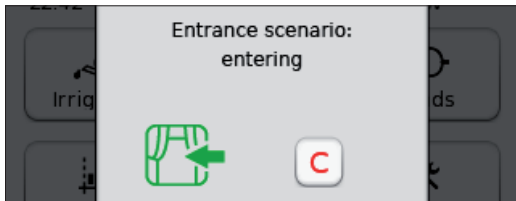


- ▶ Press  to cancel the activation.



• If the key is associated with an entry scenario and an exit scenario, these will be suggested alternately if the key is passed repeatedly or held near the sensor.

 
If no scenarios are paired with the key, the following screen will appear:



## SETUP - PROTECTION


The menu can be used to adjust the safety parameters.

 
- ▶ Select the desired option by pressing the corresponding icon.

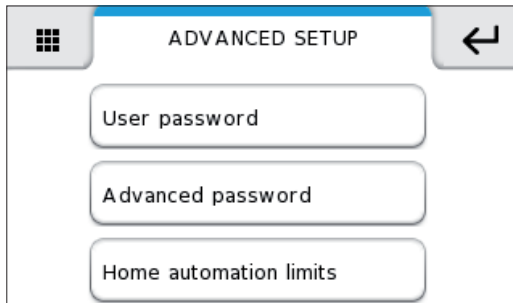



## USER PASSWORD

 
Press the USER PASSWORD icon. The function can be used to change the saved user password. (Default = 111111)

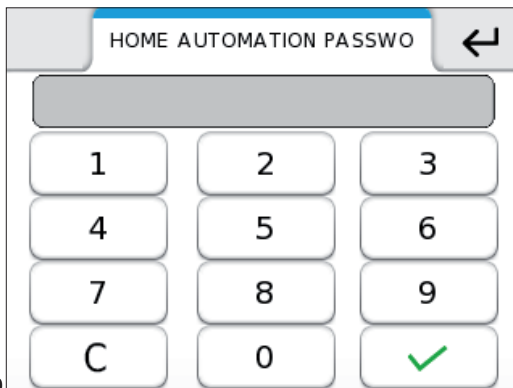

 - ▶ Enter the HOME AUTOMATION PASSWORD (or the ADVANCED PASSWORD), then confirm with  to access the panel.

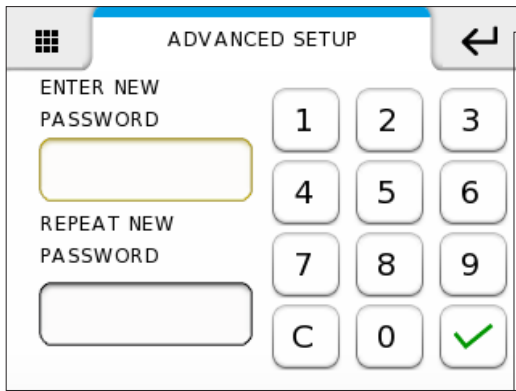


 - ▶ Enter the NEW USER PASSWORD and re-enter it; confirm using the  key.
- » A confirmation screen opens.

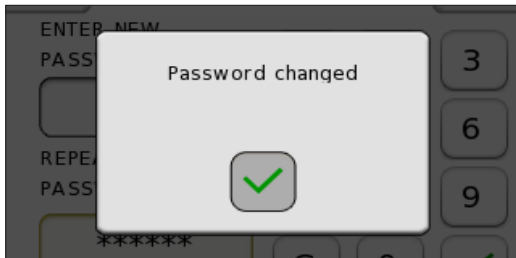


## ADVANCED PASSWORD

 - ▶ Press the ADVANCED PASSWORD icon. The function can be used to change the saved advanced password.

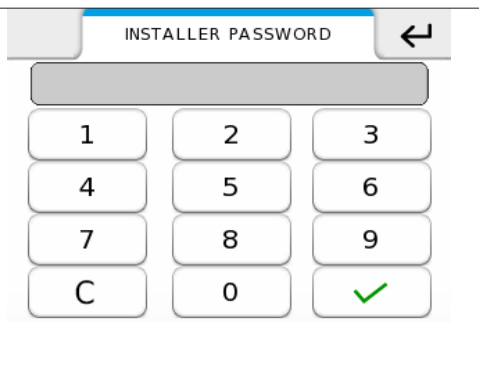

 
- ▶ Enter the HOME AUTOMATION PASSWORD (default = 001961) for access.

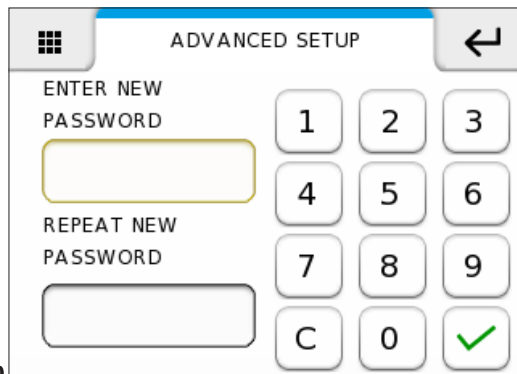




- ▶ Enter the NEW ADVANCED PASSWORD and re-enter it; confirm using the  key.

 » A confirmation screen opens.

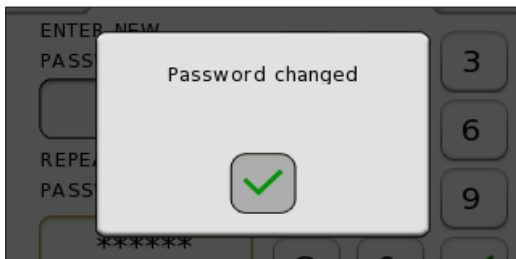

## HOME AUTOMATION LIMITS

 The panel can be used to select which functions - from the available options - to protect with a compulsory user access password.

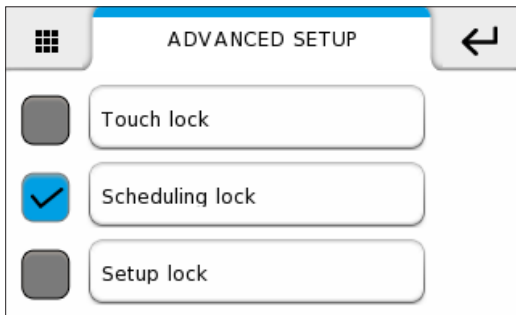


- TOUCH LOCK - if enabled, you must enter the password every time you want to activate the screen.
  - SCHEDULING LOCK - if enabled, you must enter the password every time you want to change or activate scheduling.
  - SETUP LOCK - if enabled, provides password protection when accessing the SETUP menu.
- ▶ Press the icon corresponding to the desired function to enable / disable the function.
- » Enabled functions are shown in blue .
- » Disabled functions remain grey .

## SETUP - ADVANCED

 The SETUP - ADVANCED menu contains a series of advanced level options and functions, intended for the installer.

✓ You will need to access the menu by entering the installer password.

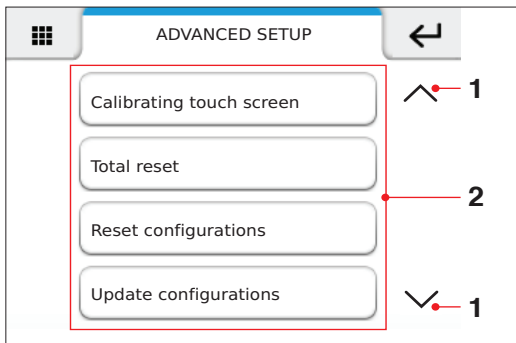


1. Scroll screen icons
2. List of available options


▶ Press the icon to select the corresponding function.

## CALIBRATING THE TOUCH SCREEN

 ▶ Confirm the process.

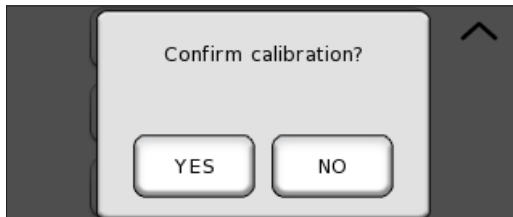


 ▶ Perform calibration by pressing the cross-shaped cursor as indicated.

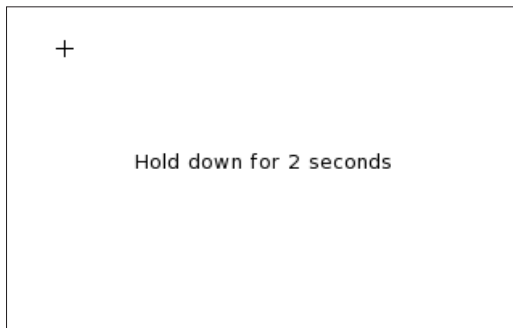

### TOTAL RESET

 
The function deletes all user, home automation and alarm system settings, plus calibration settings, restoring the default settings of the product.

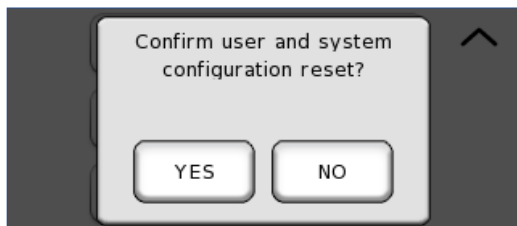

- ▶ Confirm the process.

### RESET CONFIGURATIONS

 
The function deletes all home automation and alarm system settings.

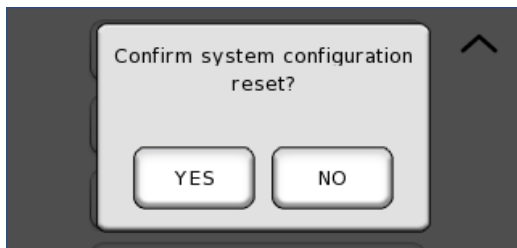

- ▶ Confirm the procedure.

### UPDATE CONFIGURATIONS

 The function updates all home automation settings in the system.

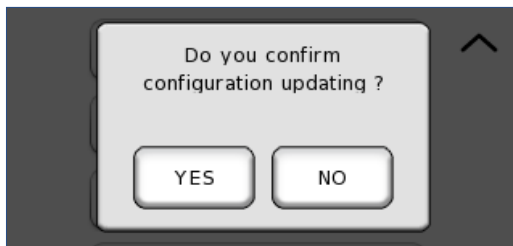


- ▶ Confirm the process.

## IMPORT / EXPORT

 The function can be used to save all user, home automation and alarm system configurations.




- An SD card with enough space to save the backup file is required. Otherwise, the system will show an error screen.

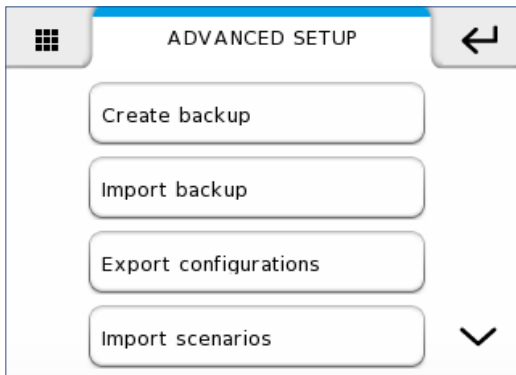

- ▶ Access the desired function by pressing the corresponding icon.

## CREATE BACKUP

 
The function can be used to create a complete system backup and save it to SD card.

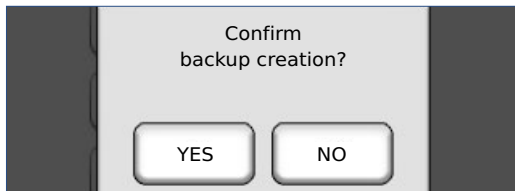

- ▶ Confirm the procedure to continue.


## IMPORT BACKUP

 The function can be used to import a complete system backup to the device from SD card.

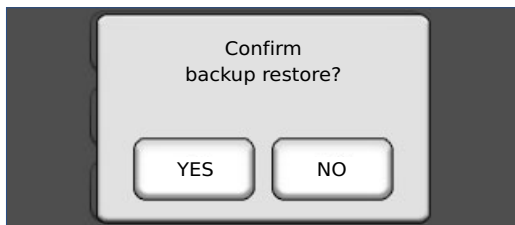

- ▶ Confirm the procedure to continue.

 » *An update screen opens.*




## EXPORT CONFIGURATIONS

The function can be used to export device configurations (scenarios; settings; video system; home automation; home automation scheduling) to SD card.



► Confirm the procedure to continue.

 
## IMPORT SCENARIOS

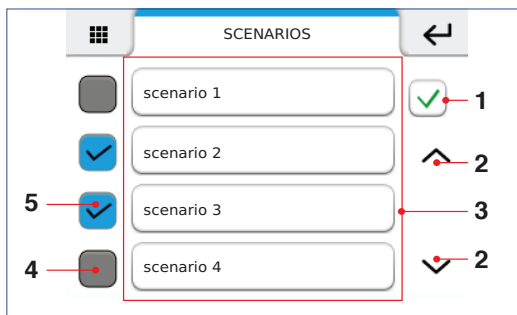


1. Confirm icon
2. Scroll screen icons
3. Scenarios available on SD
4. Scenario deselected
5. Scenario selected

Select the desired scenarios by pressing the grey icons  (the icons corresponding to the selected scenarios turn blue ) , then confirm copying with the  icon.

 » *The system communicates success.*

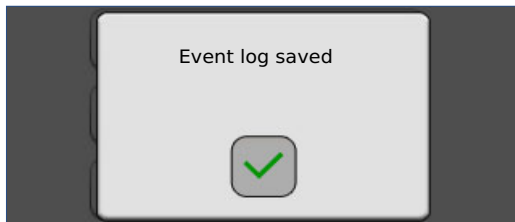

 » *If scenarios with the same name as the device exist already, the system asks for confirmation before overwriting.*

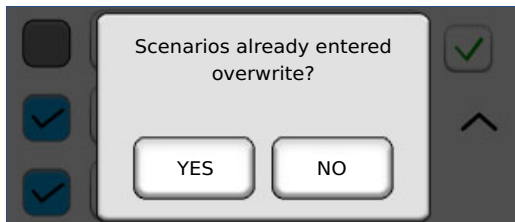

► Confirm the procedure to continue.

**IMPORT SETTINGS /  
IMPORT HOME AUTOMATION /  
IMPORT HOME AUTOMATION SCHEDULING**

The functions can be used to import settings previously saved on an SD card and linked to settings / home automation / home automation scheduling to the device.

 
- ▶ Select the desired function by pressing the corresponding icon.

» *The system asks for confirmation.*



- ▶ Confirm the procedure to continue.

» *The system communicates success.*

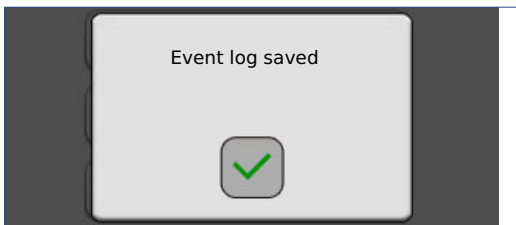


**UPDATE PRODUCT**

The function can be used to update the product firmware.

- ✓ Before updating, an SD card with at least one firmware version must be inserted.
- ▶ Select the function by pressing the corresponding icon.




 - If an ALARM CONTROL PANEL is connected the system asks you to enter the alarm password, but THE INSTALLER PASSWORD MUST BE ENTERED!

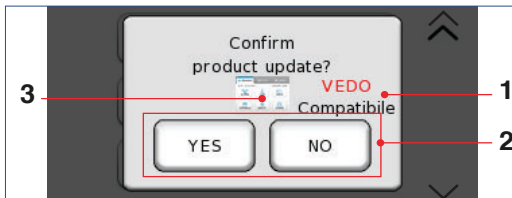

1. Selected update description
2. YES / NO icons
3. Miniature update graph

 - ▶ Press the miniature icon (3) to scroll through the available versions, then confirm your choice with



» *The system asks for confirmation before resetting.*



▶ Confirm the reset.

» *When the system is reset, it loads the updated firmware version.*


## DISABLE ALARM

 ✓ The alarm function is ENABLED.

The DISABLE ALARM function can be used to deactivate the alarm control panel, thus omitting the entire anti-intrusion system.


▶ Press the icon corresponding to the function.

» *The system asks for confirmation.*

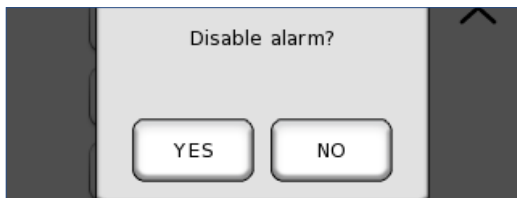

▶ Confirm the deactivation.

 » *The system resets.*



• When the device is reset, several options on the menu may appear to be missing or changed, due to the absence of the alarm control panel!


## ENABLE ALARM

 ✓ The alarm function is DISABLED.

The ENABLE ALARM function can be used to activate the alarm control panel, thus making the entire anti-intrusion system operational.


▶ Press the icon corresponding to the function.

» *The system asks for confirmation.*

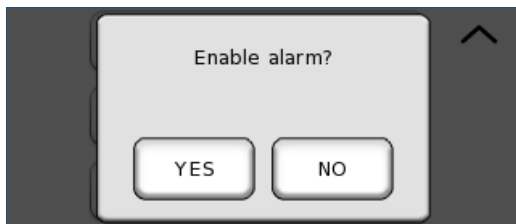

▶ Confirm the activation.

 » *The system resets.*



• When the device is reset, several options on the menu may appear changed, due to the presence of the alarm control panel!









[www.comelitgroup.com](http://www.comelitgroup.com)